

| Test | Objects | Status | Remarks |
|-------|--|--------|---|
| 4.1.1 | hrMemorySize hrStorageSize hrStorageTypes hrStorageType hrStorageDescr hrStorageUsed | PASSED | Host Resources Storage Group passed |
| 4.1.2 | hrDeviceTypes hrDeviceType hrDeviceStatus hrDeviceDescr hrDeviceProcessor hrDeviceNetwork hrDevicePrinter hrDeviceDiskStorage | FAILED | Unexpected Status |
| 4.1.3 | hrDeviceType hrProcessorLoad hrDeviceProcessor | PASSED | Host Resources Processor Table test passed |
| 4.1.4 | hrDeviceNetwork hrDeviceType hrNetworkIfIndex ifAdminStatus hrDeviceStatus | PASSED | Host Resources Network Table test passed |
| 4.1.5 | hrDeviceType hrDeviceStatus hrDeviceDescr hrDevicePrinter | PASSED | Host Printer Table test passed |
| 4.1.6 | hrDeviceDiskStorage hrDeviceType hrDiskStorageCapacity hrDiskStorageMedia hrDiskStorageRemoveable hrDiskStorageAccess | PASSED | Host Resources Disk Storage Table Test Passed |
| 4.1.7 | hrPartitionLabel hrPartitionSize hrPartitionFSIndex hrFSMountPoint | PASSED | Host Partition Table Test Passed |
| 4.1.8 | hrFSMountPoint hrFSRemoteMountPoint hrFSType hrFSAccess hrFSBootable hrFSLastPartialBackupDate hrFSLastFullBackupDate | FAILED | error noSuchName setting hrFSLastPartialBackupDate to 0x00:00:01:01:00:00:00:00 |
| 4.1.8 | hrFSMountPoint hrFSRemoteMountPoint hrFSType hrFSAccess | FAILED | see window "Failure for Test 4.1.8" |

| Test | Objects | Status | Remarks |
|-------|---|--------|--|
| 5.1.1 | hrFSBootable hrFSLastPartialBackupDate hrFSLastFullBackupDate | PASSED | Host Printer Table test passed |
| 5.1.2 | hrDeviceType hrDeviceDescr hrDevicePrinter | PASSED | Host Resources Device Status Test Passed |
| 5.2.1 | hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState | PASSED | Responsible Party Group Passed |
| 5.2.2 | prtGeneralCurrentOperator prtGeneralServicePerson | PASSED | Cover Table Test Passed |
| 5.2.3 | prtCoverStatus prtCoverDescription prtGeneralCurrentLocalization | PASSED | General Printer Group Test Passed |
| 5.2.4 | prtGeneralReset | PASSED | Reset Test Passed |
| 5.3.1 | prtGeneralReset hrPrinterStatus hrDeviceStatus prtMarkerPowerOnCount prtMarkerLifeCount prtMarkerMarkTech prtMarkerDefaultIndex prtGeneralCurrentOperator | FAILED | error noSuchName setting prtInputMediaDimFeedDirDeclared to 85000 |
| 5.3.1 | prtInputDefaultIndex prtInputMediaName prtInputName prtInputDimUnit prtInputCapacityUnit prtInputType prtInputStatus prtInputMaxCapacity prtInputCurrentLevel | PASSED | Input Table Test Passed |
| 5.3.2 | prtInputDefaultIndex prtInputMediaName prtInputName prtInputDimUnit prtInputCapacityUnit prtInputType prtInputStatus prtInputMaxCapacity prtInputCurrentLevel | FAILED | Set failed |
| | prtInputType prtInputDimUnit prtInputMediaDimFeedDirDeclared prtInputMediaDimFeedDirChosen prtInputMediaDimXFeedDirChosen prtInputCapacityUnit | | |

| Test | Objects | Status | Remarks |
|-------|---|--------|-----------------------------------|
| 5.3.3 | prtInputMaxCapacity prtInputCurrentLevel prtInputStatus prtInputMediaName | PASSED | Extended Input Group test passed |
| 5.3.4 | prtInputName prtInputVendorName prtInputModel prtInputVersion prtInputSerialNumber prtInputDescription prtInputSecurity prtGeneralCurrentLocalization | PASSED | Input Media Group Passed. |
| 5.4.1 | prtInputMediaWeight prtInputMediaType prtInputMediaColor prtInputMediaFormParts | PASSED | Output Group Table Test Passed |
| 5.4.2 | prtOutputDefaultIndex prtOutputName prtOutputType prtOutputStatus prtOutputCapacityUnit prtOutputType | FAILED | Expected alert in status |
| 5.4.3 | prtOutputType prtOutputCapacityUnit prtOutputMaxCapacity prtOutputRemainingCapacity prtOutputStatus | PASSED | Extended Output Group test passed |
| 5.4.5 | prtOutputName prtOutputVendorName prtOutputModel prtOutputVersion prtOutputSerialNumber prtOutputDescription prtOutputSecurity prtGeneralCurrentLocalization | PASSED | Output Features Group Passed |
| 5.5.1 | prtOutputStackingOrder prtOutputPageDeliveryOrientation \$var | PASSED | Marker Table Test Passed |
| | prtMarkerCounterUnit prtMarkerStatus prtMarkerPowerOnCount prtMarkerLifeCount prtMarkerAddressabilityUnit prtMarkerMarkTech prtMarkerProcessColorants prtMarkerSpotColorants prtMarkerMarkTech prtMarkerDefaultIndex prtMarkerNorthMargin prtMarkerSouthMargin prtMarkerEastMargin prtMarkerWestMargin | | |

| Test | Objects | Status | Remarks |
|-------|--|--------|-----------------------------------|
| 5.5.2 | prtMarkerAddressabilityFeedDir prtMarkerAddressabilityXFeedDir | PASSED | Marker Group Test Passed |
| 5.5.3 | prtMarkerAddressabilityUnit prtMarkerAddressabilityFeedDir prtMarkerAddressabilityXFeedDir prtMarkerNorthMargin prtMarkerSouthMargin prtMarkerEastMargin prtMarkerWestMargin prtMarkerSuppliesType prtMarkerPowerOnCount prtMarkerLifeCount | PASSED | Marker Supply Table Test Passed |
| 5.5.4 | prtMarkerSuppliesColorantIndex prtMarkerSuppliesMarkerIndex prtMarkerSuppliesClass prtMarkerSuppliesSupplyUnit prtMarkerSuppliesMaxCapacity prtMarkerSuppliesLevel prtMarkerStatus prtMarkerColorantRole prtMarkerSuppliesDescription prtGeneralCurrentLocalization | PASSED | Marker Colorant Table Test Passed |
| 5.6.1 | prtMarkerColorantMarkerIndex prtMarkerColorantRole prtMarkerColorantTonality prtMarkerStatus | PASSED | Media Path Table Test Passed |
| 5.6.2 | prtMediaPathMaxSpeedPrintUnit prtMediaPathMediaSizeUnit prtMediaPathType prtMediaPathStatus prtMediaPathMaxSpeed prtMediaPathDescription prtMediaPathDefaultIndex | PASSED | Media Path Group Test Passed |
| 5.8.1 | prtMediaPathMaxMediaFeedDir prtMediaPathMaxMediaXFeedDir prtMediaPathMinMediaFeedDir prtMediaPathMinMediaXFeedDir prtMediaPathMediaSizeUnit prtMediaPathType prtMediaPathDescription prtGeneralCurrentLocalization prtInterpreterLangFamily prtInterpreterDefaultOrientatio | PASSED | Interpreter Group test passed |

| Test | Objects | Status | Remarks |
|--------|--|--------|--|
| 5.9.1 | n prtInterpreterTwoWay prtInterpreterDescription prtGeneralCurrentLocalization | PASSED | The Console Group Test has Passed |
| 5.9.2 | prtConsoleNumberOfDisplayLines prtConsoleNumberOfDisplayChars prtConsoleLocalization prtConsoleDisable prtConsoleLocalization prtLocalizationLanguage | FAILED | error noSuchName setting prtConsoleDisplayBufferText to XXX |
| 5.9.3 | prtConsoleDisplayBufferText | PASSED | Console Light Table Empty |
| 5.10.1 | prtConsoleOnTime prtConsoleOffTime prtConsoleDescription | FAILED | Printer did not issue an expected trap |
| 5.10.2 | printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState | FAILED | Printer did not issue an expected trap |
| 5.10.3 | printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState | FAILED | Printer did not issue an expected trap |
| 5.10.4 | printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState | FAILED | Printer did not issue an expected trap |