

Test	Objects	Status	Remarks
4.1.1	hrMemorySize hrStorageSize hrStorageTypes hrStorageType hrStorageDescr hrStorageUsed	PASSED	Storage Table Empty
4.1.2	hrDeviceTypes hrDeviceType hrDeviceStatus hrDeviceDescr hrDeviceProcessor hrDeviceNetwork hrDevicePrinter hrDeviceDiskStorage	PASSED	Host Resources Device Table test passed
4.1.3	hrDeviceType hrProcessorLoad hrDeviceProcessor	PASSED	Processor Table Empty
4.1.4	hrDeviceNetwork hrDeviceType hrNetworkIfIndex ifAdminStatus hrDeviceStatus	PASSED	Host Resources Network Table test passed
4.1.5	hrDeviceType hrDeviceStatus hrDeviceDescr hrDevicePrinter	PASSED	Host Printer Table test passed
4.1.6	hrDeviceDiskStorage hrDeviceType hrDiskStorageCapacity hrDiskStorageMedia hrDiskStorageRemoveable hrDiskStorageAccess	PASSED	Disk Storage Table Empty
4.1.7	hrPartitionLabel hrPartitionSize hrPartitionFSIndex hrFSMountPoint	PASSED	Partition Table Empty
4.1.8	hrFSTypes hrFSMountPoint hrFSRemoteMountPoint hrFSType hrFSAccess hrFSBootable hrFSLastPartialBackupDate hrFSLastFullBackupDate	PASSED	File System Table Empty
5.1.1	hrDeviceType hrDeviceDescr hrDevicePrinter	PASSED	Host Printer Table test passed
5.1.2	hrDeviceStatus hrPrinterStatus	FAILED	Unexpected hrPrinterStatus

Test	Objects	Status	Remarks
5.2.1	hrPrinterDetectedErrorState	PASSED	Responsible Party Group Passed
5.2.2	prtGeneralCurrentOperator prtGeneralServicePerson	PASSED	Cover Table Test Passed
5.2.3	prtCoverStatus prtCoverDescription prtGeneralCurrentLocalization	PASSED	General Printer Group Test Passed
5.2.4	prtGeneralReset	FAILED	error noSuchName setting prtMarkerDefaultIndex to 1
5.3.1	prtGeneralReset hrPrinterStatus hrDeviceStatus prtMarkerPowerOnCount prtMarkerLifeCount prtMarkerMarkTech prtMarkerDefaultIndex prtGeneralCurrentOperator	FAILED	error genErr setting prtInputMediaDimFeedDirDeclared to 110000
5.3.1	prtInputDefaultIndex prtInputMediaName prtInputName prtInputDimUnit prtInputCapacityUnit prtInputType prtInputStatus prtInputMaxCapacity prtInputCurrentLevel	FAILED	error noSuchName setting prtInputDefaultIndex to 2
5.3.2	prtInputDefaultIndex prtInputMediaName prtInputName prtInputDimUnit prtInputCapacityUnit prtInputType prtInputStatus prtInputMaxCapacity prtInputCurrentLevel	FAILED	Prerequisite Test 5.3.1 failed
5.3.3	prtInputType prtInputDimUnit prtInputMediaDimFeedDirDeclared prtInputMediaDimFeedDirChosen prtInputMediaDimXFeedDirChosen prtInputCapacityUnit prtInputMaxCapacity prtInputCurrentLevel prtInputStatus prtInputMediaName	FAILED	Prerequisite Test 5.3.1 failed
	prtInputName prtInputVendorName prtInputModel		

Test	Objects	Status	Remarks
5.3.4	prtInputVersion prtInputSerialNumber prtInputDescription prtInputSecurity prtGeneralCurrentLocalization	FAILED	Prerequisite Test 5.3.1 failed
5.4.1	prtInputMediaWeight prtInputMediaType prtInputMediaColor prtInputMediaFormParts	FAILED	error noSuchName setting prtOutputDefaultIndex to 2
5.4.2	prtOutputDefaultIndex prtOutputName prtOutputType prtOutputStatus prtOutputCapacityUnit prtOutputType	FAILED	Prerequisite Test 5.4.1 failed
5.4.3	prtOutputType prtOutputCapacityUnit prtOutputMaxCapacity prtOutputRemainingCapacity prtOutputStatus	FAILED	Prerequisite Test 5.4.1 failed
5.4.4	prtOutputName prtOutputVendorName prtOutputModel prtOutputVersion prtOutputSerialNumber prtOutputDescription prtOutputSecurity prtGeneralCurrentLocalization	FAILED	Prerequisite Test 5.4.1 failed
5.4.5	prtOutputDimUnit prtOutputMaxDimFeedDir prtOutputMaxDimXFeedDir prtOutputMinDimFeedDir prtOutputMinDimXFeedDir	FAILED	Prerequisite Test 5.4.1 failed
5.5.1	prtOutputStackingOrder prtOutputPageDeliveryOrientation \$var	FAILED	error noSuchName setting prtMarkerDefaultIndex to 1
	prtMarkerCounterUnit prtMarkerStatus prtMarkerPowerOnCount prtMarkerLifeCount prtMarkerAddressabilityUnit prtMarkerMarkTech prtMarkerProcessColorants prtMarkerSpotColorants prtMarkerMarkTech prtMarkerDefaultIndex prtMarkerNorthMargin prtMarkerSouthMargin prtMarkerEastMargin prtMarkerWestMargin		

Test	Objects	Status	Remarks
5.5.2	prtMarkerAddressabilityFeedDir prtMarkerAddressabilityXFeedDir	FAILED	Prerequisite Test 5.5.1 failed
5.5.3	prtMarkerAddressabilityUnit prtMarkerAddressabilityFeedDir prtMarkerAddressabilityXFeedDir prtMarkerNorthMargin prtMarkerSouthMargin prtMarkerEastMargin prtMarkerWestMargin prtMarkerSuppliesType prtMarkerPowerOnCount prtMarkerLifeCount	FAILED	Invalid type 1 enumeration
5.5.4	prtMarkerSuppliesColorantIndex prtMarkerSuppliesMarkerIndex prtMarkerSuppliesClass prtMarkerSuppliesSupplyUnit prtMarkerSuppliesMaxCapacity prtMarkerSuppliesLevel prtMarkerStatus prtMarkerColorantRole prtMarkerSuppliesDescription prtGeneralCurrentLocalization	PASSED	Marker Colorant Table Test Passed
5.6.1	prtMarkerColorantMarkerIndex prtMarkerColorantRole prtMarkerColorantTonality prtMarkerStatus	FAILED	Invalid Speed Value
5.6.2	prtMediaPathMaxSpeedPrintUnit prtMediaPathMediaSizeUnit prtMediaPathType prtMediaPathStatus prtMediaPathMaxSpeed prtMediaPathDescription prtMediaPathDefaultIndex	FAILED	Prerequisite Test 5.6.1 failed
5.8.1	prtMediaPathMaxMediaFeedDir prtMediaPathMaxMediaXFeedDir prtMediaPathMinMediaFeedDir prtMediaPathMinMediaXFeedDir prtMediaPathMediaSizeUnit prtMediaPathType prtMediaPathDescription prtGeneralCurrentLocalization	FAILED	error noSuchName setting

Test	Objects	Status	Remarks
			prtGeneralCurrentLocalization to 2
5.9.1	prtInterpreterLangFamily prtInterpreterDefaultOrientation prtInterpreterTwoWay prtInterpreterDescription prtGeneralCurrentLocalization	FAILED	Unexpected Value
5.9.2	prtConsoleNumberOfDisplayLines prtConsoleNumberOfDisplayChars prtConsoleLocalization prtConsoleDisable prtConsoleLocalization prtLocalizationLanguage	FAILED	error genErr setting prtConsoleDisplayBufferText to XXX
5.9.3	prtConsoleDisplayBufferText	PASSED	Console Light Table Empty
5.10.1	prtConsoleOnTime prtConsoleOffTime prtConsoleDescription	PASSED	Printer doesn't send traps
5.10.2	printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState	PASSED	Printer doesn't send traps
5.10.3	printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState	PASSED	Printer doesn't send traps
5.10.4	printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState	PASSED	Printer doesn't send traps