

1
2
3
4
5 |
6
7
8
9
10
11

OpenPrinting

Vector Printer Driver Application Program Interface (OPVP) Specification

Version-1.0 RC6September 27, 2010

(2009-12-24)

Status: Stable

12
13
14 **Abstract:** The Open Printing Vector Printer Driver Application Program Interface (OPVP), defines a standard
15 method for querying the graphics and printing capabilities of installed printers and for printing graphical
16 documents to selected printers.

1 OpenPrinting Vector Printer Driver Application Program Interface Specification

2
3 | Copyright © 2004-2009¹⁰ OpenPrinting Work Group

4 Permission is hereby granted, free of charge, to any person obtaining a copy of this documentation, to deal in the documentation
5 without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or
6 sell copies of the documentation, and to permit persons to whom the Software is furnished to do so, subject to the following
7 conditions:

8 The above copyright notice and this permission notice shall be included in all copies or substantial portions of the
9 documentation.

10 THE DOCUMENTATION IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED,
11 INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR
12 PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE
13 LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT
14 OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE DOCUMENTATION OR THE USE OR
15 OTHER DEALINGS IN THE DOCUMENTATION.

16 UNIX is a registered trademark of the Open Group in the United States and other countries.

17 Linux is a trademark of Linus Torvalds.

18 The X Window System is a trademark of X Consortium, Inc.

19 OpenGL is a registered trademark of Silicon Graphics, Inc.

20 PostScript is a registered trademark of Adobe Systems Inc.

Table of Contents

1.Notation and Terminology.....	6
1.1.Notational Conventions.....	6
1.2.Conformance Terminology.....	6
1.3.Model Terminology.....	6
2.Introduction.....	7
3.Graphic Model.....	8
3.1.Coordinate System.....	8
3.2.Graphics State Object.....	8
3.3.CTM.....	9
3.4.Color.....	9
3.5.Graphics Operations.....	9
3.6.Image Data Format.....	10
4.Operations.....	11
4.1.Creating and Managing Printer Contexts.....	11
4.1.1.opvpOpenPrinter.....	11
4.1.2.opvpClosePrinter.....	11
4.2.Job, Document and Page Operations.....	13
4.2.1.opvpStartJob.....	13
4.2.2.opvpEndJob.....	13
4.2.3.opvpAbortJob.....	14
4.2.4.opvpStartDoc.....	14
4.2.5.opvpEndDoc.....	15
4.2.6.opvpStartPage.....	15
4.2.7.opvpEndPage.....	16
4.3.Query Operations.....	17
4.3.1.opvpQueryDeviceCapability.....	17
4.3.2.opvpQueryDeviceInfo.....	18
4.4.Attributes.....	19
4.4.1.Attributes for Job, Document and Page Operations.....	19
4.4.2.Attributes Override.....	20
4.5.Graphics State Object Operations.....	21
4.5.1.opvpResetCTM.....	21
4.5.2.opvpSetCTM.....	21
4.5.3.opvpGetCTM.....	22
4.5.4.opvpInitGS.....	22
4.5.5.opvpSaveGS.....	22
4.5.6.opvpRestoreGS.....	23
4.5.7.opvpQueryColorSpace.....	23
4.5.8.opvpSetColorSpace.....	24
4.5.9.opvpGetColorSpace.....	24
4.5.10.opvpSetFillMode.....	25
4.5.11.opvpGetFillMode.....	25
4.5.12.opvpSetAlphaConstant.....	25
4.5.13.opvpGetAlphaConstant.....	26
4.5.14.opvpSetLineWidth.....	26
4.5.15.opvpGetLineWidth.....	27
4.5.16.opvpSetLineDash.....	27
4.5.17.opvpGetLineDash.....	28
4.5.18.opvpSetLineDashOffset.....	28

4.5.19.opvpGetLineDashOffset.....	28
4.5.20.opvpSetLineStyle.....	29
4.5.21.opvpGetLineStyle.....	29
4.5.22.opvpSetLineCap.....	30
4.5.23.opvpGetLineCap.....	30
4.5.24.opvpSetLineJoin.....	31
4.5.25.opvpGetLineJoin.....	31
4.5.26.opvpSetMiterLimit.....	32
4.5.27.opvpGetMiterLimit.....	32
4.5.28.opvpSetPaintMode.....	32
4.5.29.opvpGetPaintMode.....	33
4.5.30.opvpSetStrokeColor.....	33
4.5.31.opvpSetFillColor.....	34
4.5.32.opvpSetBgColor.....	35
4.6.Path Operations.....	36
4.6.1.opvpNewPath.....	36
4.6.2.opvpEndPath.....	36
4.6.3.opvpStrokePath.....	36
4.6.4.opvpFillPath.....	37
4.6.5.opvpStrokeFillPath.....	37
4.6.6.opvpSetClipPath.....	37
4.6.7.opvpResetClipPath.....	38
4.6.8.opvpSetCurrentPoint.....	38
4.6.9.opvpLinePath.....	39
4.6.10.opvpPolygonPath.....	39
4.6.11.opvpRectanglePath.....	40
4.6.12.opvpRoundRectanglePath.....	40
4.6.13.opvpBezierPath.....	41
4.6.14.opvpArcPath.....	41
4.7.Bitmap Image Operations.....	43
4.7.1.opvpDrawImage.....	43
4.7.2.opvpStartDrawImage.....	44
4.7.3.opvpTransferDrawImage.....	45
4.7.4.opvpEndDrawImage.....	45
4.8.Scan Line Operations.....	46
4.8.1.opvpStartScanline.....	46
4.8.2.opvpScanline.....	46
4.8.3.opvpEndScanline.....	47
4.9.Raster Image Operations.....	48
4.9.1.opvpStartRaster.....	48
4.9.2.opvpTransferRasterData.....	48
4.9.3.opvpSkipRaster.....	49
4.9.4.opvpEndRaster.....	49
4.10.Stream Data Operations.....	50
4.10.1.opvpStartStream.....	50
4.10.2.opvpTransferStreamData.....	50
4.10.3.opvpEndStream.....	50
5.Macros, Types, Enumerations and Structures.....	52
5.1.Return Values.....	52
5.2.Error Codes.....	52
5.3.Basic Types.....	52

5.4.Image Formats.....	52
5.5.Color Presentation.....	52
5.6.Fill, Paint, Clip.....	53
5.7.Line.....	53
5.8.Brush.....	53
5.9.Miscellaneous Flags.....	53
5.10.CTM.....	54
5.11.Device Information and Capabilities.....	54
5.12.API Procedures Structure.....	54
6.Conformance Requirement.....	56
7.Security Considerations.....	57
8 AUTHORS AND CONTRIBUTORS.....	58
8.1.Editors.....	58
8.2.Authors.....	58
8.3.Contributors.....	58
9.History.....	59

1

1. Notation and Terminology

1.1. Notational Conventions

2 This section describes the use of font and style in this document.

Font and Style	Description	Examples
Courier	Definition of functions, structures, enumerations and constants.	<pre>opvp_result_t opvpClosePrinter(opvp_dc_t printerContext);</pre> <pre>typedef struct _opvp_point { opvp_fix_t x, y; } opvp_point_t;</pre> <pre>#define OPVP_OK 0</pre>
	Function parameters .	printerContext
	Source code examples.	<pre>#ifndef _OPVP_H_ #define _OPVP_H_</pre>
<i>Italic</i>	Coordinate values (x, y)	(x0, y0)

3

4

1.2. Conformance Terminology

2 In this document, capitalized terms, such as: MUST, MUST NOT, REQUIRED, SHOULD, SHOULD NOT, MAY, and
3 | OPTIONAL, are intended to be interpreted as described in [RFC2119].

4 |

1.3. Model Terminology

2 | In this document, the following terms are used to describe the sequence of OPVP API calls:

3 | Caller: A software application that invokes functions in the OPVP API (see discussion in section 2 Introduction).

4 | Driver: A printer driver that receives function calls in the OPVP API (see discussion in section 2 Introduction).

5 | Inline both of these terms are usually lower case, e.g., "caller".

6 |

2. Introduction

This document specifies an application program interface (API) for printer drivers in the OpenPrinting print environment. The API defined in this specification is meant for use by applications that need to print documents as well as subcomponents of the print system. The API provides an abstraction layer to access the graphics and printing capabilities that a printer supports, either via a printer language or any other means. As a result of this, it becomes possible to use the printer's full potential without the need for detailed knowledge and understanding of each printer model's internals and peculiarities.

The specification defined in this document targets personal devices capable of only raster graphics such as ink-jet printers as well as production systems using high-end laser printers. In particular, this specification provides access to the high level graphics instructions that are available on devices in the latter category, facilitating improved performance.

When an application program prints in the OpenPrinting print environment, the application, either directly or indirectly via supporting libraries, produces "document data". Normally, this kind of document data uses a device independent page description language such as PostScript or Portable Document Format (PDF). When the printing device can not process such device independent document data directly, the printing system will pass this data to a separate piece of software called the "renderer". The renderer interprets the device independent document data and transforms it into a sequence of calls to a printer driver using the API entries defined in this document. Based on these calls, the printer driver produces printer commands that the printing device is able to process. The printer commands produced by the printer driver are then sent to the printing device by the print system, finally resulting in printed output.

The previous paragraph merely explains a typical flow of events in the print process but, apart from a renderer placing the API calls defined here, printer drivers may be called on by other software components as well. In the remainder of this document we will refer to any module calling on the printer driver as the "Caller" and simply use "Driver" when talking about the printer driver.

1

3. Graphic Model

3.1. Coordinate System

2 The origin of the coordinate system as defined and used in this specification
 3 is the physical upper left corner of the media handled by a device. Units of
 4 the coordinate system are based on the device resolution. Positive direction
 5 on the x-axis is from the origin towards the right side of the media, and
 6 positive direction on the y-axis is from the origin towards the bottom of the
 7 media.

8 The type of the coordinate value is a signed fixed point 32 bit value, where
 9 the integer part uses 24 bits and the fractional part 8 bits. The type name is
 10 `opvp_fix_t`.

11 Coordinate values x and y define the horizontal and vertical distance from
 12 the origin to a point on the media. A point with integer coordinate values x
 13 and y is on the intersection of the coordinate system grid. Physical device
 14 pixels are assumed to be printed on the intersections of the grid (Grid
 15 Intersection Model). The relation between coordinate grid and device pixels
 16 is shown in the bottom figure on the right.

1

2

3.2. Graphics State Object

2 For each printer, a printer driver MUST maintain a “Graphics State Object”
 3 which contains properties and drawing attributes used for drawing graphics
 4 for a printer. When calling a printer driver, the caller can specify only one
 5 Graphics State Object to the driver. However, caller and driver MAY
 6 maintain multiple Graphics State Objects to control different printers, and
 7 even save and restore the properties and drawing attributes of each Graphics
 8 State Object using the `opvpSaveGS()` and `opvpRestoreGS()`
 9 functions.


10 A graphics State Object MUST provide the following properties and
 11 drawing attributes. Please refer to the description of the related functions for
 12 more details on the properties and drawing attributes.

13

Properties	Related functions
CTM	<code>opvpResetCTM()</code> , <code>opvpSetCTM()</code> , <code>opvpGetCTM()</code>
Clipping region	<code>opvpSetClipPath()</code> , <code>opvpResetClipPath()</code>

14

Drawing Attributes	Related functions
Color space	<code>opvpQueryColorSpace()</code> , <code>opvpSetColorSpace()</code> , <code>opvpGetColorSpace()</code>
Filling mode	<code>opvpSetFillMode()</code> , <code>opvpGetFillMode()</code>
Alpha blending constant	<code>opvpSetAlphaConstant()</code> , <code>opvpGetAlphaConstant()</code>
Stroke line width	<code>opvpSetLineWidth()</code> , <code>opvpGetLineWidth()</code>
Line dash pattern	<code>opvpSetLineDash()</code> , <code>opvpGetLineDash()</code>
Line dash pattern offset	<code>opvpSetLineDashOffset()</code> , <code>opvpGetLineDashOffset()</code>
Line style	<code>opvpSetLineStyle()</code> , <code>opvpGetLineStyle()</code>
Line cap style	<code>opvpSetLineCap()</code> , <code>opvpGetLineCap()</code>
Line join style	<code>opvpSetLineJoin()</code> , <code>opvpGetLineJoin()</code>
Miter limit value	<code>opvpSetMiterLimit()</code> , <code>opvpGetMiterLimit()</code>
Painting mode	<code>opvpSetPaintMode()</code> , <code>opvpGetPaintMode()</code>
Stroke line color	<code>opvpSetStrokeColor()</code>
Fill color	<code>opvpSetFillColor()</code>
Background color	<code>opvpSetBgColor()</code>

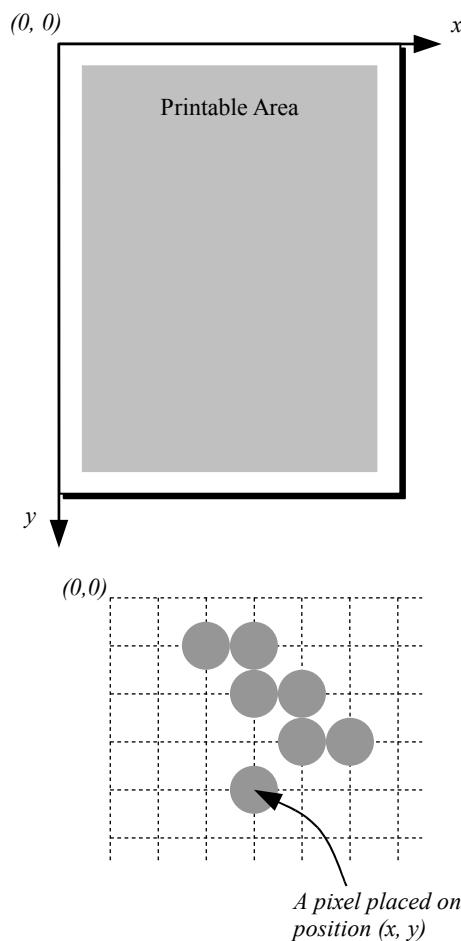

1 3.3.CTM

2 A printer driver MUST maintain a Coordinate Transformation Matrix (CTM) with each Graphics State Object. The CTM is
 3 used for transformation from the caller's (renderer) coordinate system to the printer's (device) coordinate system. A CTM
 4 transforms the renderer coordinates to device coordinates as follows:

$$5 \quad [x_{dev} \quad y_{dev} \quad 1] = [x_{ren} \quad y_{ren} \quad 1] \times \begin{bmatrix} a & b & 0 \\ c & d & 0 \\ e & f & 1 \end{bmatrix}$$

6 To get, set or reset a CTM from the Graphics State Object, use the `opvpGetCTM()`, `opvpSetCTM()`, `opvpResetCTM()`
 7 functions.

8

1 3.4.Color

2 The following color spaces are defined by this document.

Color Space Macro	Color Space
<code>OPVP_CSPACE_BW</code>	Black and White
<code>OPVP_CSPACE_DEVICEGRAY</code>	Gray scale
<code>OPVP_CSPACE_DEVICECMY</code>	CMY
<code>OPVP_CSPACE_DEVICECMYK</code>	CMY and Black
<code>OPVP_CSPACE_DEVICERGB</code>	Device RGB
<code>OPVP_CSPACE_DEVICEKRGB</code>	Device KRGB
<code>OPVP_CSPACE_STANDARDRGB</code>	sRGB
<code>OPVP_CSPACE_STANDARDRGB64</code>	scRGB

3 |
 4 A printer driver MUST support at least one of the three color spaces, `OPVP_CSPACE_BW`, `OPVP_CSPACE_DEVICEGRAY`
 5 and `OPVP_CSPACE_STANDARDRGB`. Other color spaces are reserved for future extension.

6

1 3.5.Graphics Operations

2 The following graphics operations are defined in this document:

Graphics Operation	Description	Section
Path	Operations for drawing lines, curves, rectangles and other kinds of shapes. A path is maintained as part of a printer context and is shared by all the Graphics State Objects managed by a single printer context. Note: The clipping region is managed by the Graphics State Object, not by the printer context.	4.6
Bitmap Image	Operations for drawing pixel oriented rectangular images.	4.7
Scan Line	Operations for drawing of horizontal lines defined by one or more pairs of begin and end points.	4.8
Raster Image	Operations for drawing whole pages by image instead of using Path Operations and Bitmap Image Operations.	4.9

3
 4 The color and color space in effect for "Path" and "Scan Line" operations are controlled via the `opvpSetColorSpace()`,
 5 `opvpSetStrokeColor()` and `opvpSetFillColor()` functions. "Path" and "Scan Line" operations are not affected by the
 6 `opvpSetColorSpace()` function.

7 The image data format for "Bitmap Image" and "Raster Image" operations is dependent on the color space set by the
 8 `opvpSetColorSpace()` function.

9 Image data formats for each color space are defined in the following section.

10

1 3.6.Image Data Format

- 2 The following image formats are defined in this document:

Color Space	# of Channels	Bits per Channel	Bits per Pixel	Bytes per Pixel	Note
OPVP_CSPACE_BW	1	1	1	1/8	The MSB corresponds to the left and the LSB to the right pixel in the printed result. Padding bits are added to the rightmost byte if necessary. A bit value of “1” indicates white, a value of “0” indicates black.
OPVP_CSPACE_DEVICEGRAY	1	8	8	1	Maximum luminance value is 0xFF. A value of 0xFF indicates white, 0x00 indicates black.
OPVP_CSPACE_STANDARDRGB	3	8	24	3	The order of the channels is R,G,B,R,G,B,R,G,B... The maximum luminance value of each channel is 0xFF.

1

4.Operations

1 4.1.Creating and Managing Printer Contexts

2 This section defines functions to create and delete printer driver contexts. These functions MUST be supported by all drivers.

3 4.1.1.opvpOpenPrinter

4 **Name**

5 opvpOpenPrinter – Creates a printer context.

6 **Synopsis**

```
7 opvp_dc_t opvpOpenPrinter(
8     opvp_int_t outputFD,
9     const opvp_char_t *printerModel,
10    const opvp_int_t apiVersion[2],
11    struct _opvp_api_procs **apiEntry);
```

12 **Arguments**

13 outputFD – File descriptor to write the printing data stream to.

14 printerModel – Printer model name (UTF-8 encoded).

15 apiVersion – Vector printer driver API version. apiVersion[0] is the major and apiVersion[1] is the minor value
16 of the version respectively.

17 apiEntry – Pointer to a structure which stores all API entries of the driver.

18 **Description**

19 This function initializes the driver. The caller MUST specify the file descriptor for writing the printing data stream, and the
20 driver MUST write the printing data stream it generates to the file descriptor. The caller may specify a UTF-8 encoded printer
21 model name via printerModel. If the caller passes NULL for printerModel, the driver SHOULD use the default printer
22 model of the driver.

23 The caller MUST set the API version number that it expects from the driver via the apiVersion array. In case the driver
24 does not support the API version that the caller requests, the driver MUST return an error and set the detailed error code to
25 OPVP_VERSIONERROR.

26 The driver may write debugging messages to stderr. Therefore stderr MUST NOT be passed as outputFD by the caller.

27 The driver MUST allocate the struct _opvp_api_procs buffer and store the address of each driver API entry into to
28 corresponding member of apiEntry. If the driver does not support some API entries, it MUST store NULL into the
29 corresponding apiEntry members.

30 This function is the only function that MUST be exported by the driver library. The caller MUST refer to and call any other
31 API entry via the addresses stored in the apiEntry buffer.

32 The printer driver MUST return a printer context as the return value of this function. The printer context MUST be a unique
33 number which is managed by the driver. The caller passes the printer context as the first argument when calling other API
34 entries.

35 **Return Value**

36 Printer context value (positive value) or -1 in case of error. In the later case, the driver MUST store a detailed error code in
37 opvpErrorNo.

38 4.1.2.opvpClosePrinter

39 **Name**

40 opvpClosePrinter – Deletes a printer context.

41 **Synopsis**

```
42 opvp_result_t opvpClosePrinter(
43     opvp_dc_t printerContext);
```

1 **Arguments**

2 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

3 **Description**

4 This function terminates the printing process and deletes the printer context from the printer driver. The caller SHOULD close
5 the file descriptor that was passed as `outputFD` to the `opvpOpenPrinter()` function.

6 | The caller **shouldMUST** call the `opvpEndJob()` function before calling this function to declare the end of the printing job. If
7 | the caller calls this function before a printing job is completed, in other words, if the caller calls this function before calling the
8 | `opvpEndJob()` function, the driver **shouldMAY** discard all data from the printing data stream for the printing job. In this
9 | situation, the driver need not guarantee that the printing job is canceled normally.

10 **Return Value**

11 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store a detailed error code in `opvpErrorNo`.

1 4.2.Job, Document and Page Operations

2 This section defines functions to operate job controls. These functions MUST be supported by all drivers. One printing job
 3 consists of one or more documents. One document consists of one or more pages. The caller MUST call the
 4 `opvpStartJob()` to declare the start of a printing job, and call the `opvpEndJob()` function to declare the end of the
 5 printing job for each job. In addition, it MUST call the `opvpStartDoc()` and `opvpEndDoc()` functions for starting and
 6 ending of every document, and it also MUST call the `opvpStartPage()` and `opvpEndPage()` functions for starting and
 7 ending of every page. However, if a printing job consists of only one document, the caller ~~can~~MAY omit calling the
 8 `opvpStartDoc()` and `opvpEndDoc()` functions.

9 4.2.1.opvpStartJob

10 Name

11 `opvpStartJob` – Declares the start of a printing job.

12 Synopsis

```
13    opvp_result_t opvpStartJob(
14         opvp_dc_t printerContext,
15         const opvp_char_t *jobInfo);
```

16 Arguments

17 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

18 `jobInfo` – Printing job property string.

19

20 Description

21 This function declares the start of a printing job.

22 The caller MUST call this function before calling the `opvpStartDoc()` or `opvpStartPage()` functions or any other
 23 drawing API entries.

24 The caller can set printing job properties via `jobInfo`. The printer driver MUST keep the given printing job properties until
 25 the `opvpEndJob()` function is called. When the caller calls the `opvpStartJob()` function again after calling the
 26 `opvpEndJob()` function, the driver MUST override the former `jobInfo` with the new `jobInfo` specified by the latest
 27 `opvpStartJob()` function call.

28 If the caller passes `NULL` for the `jobInfo`, the printer driver MUST SHOULD use its default printing job properties. The data
 29 format of `jobInfo` is described in the section "Attributes for Job, Document and Page Operations" in this document.

30 ~~It depends on printer and driver capabilities whether nested printing jobs are supported. A nested printing job is one where the opvpStartJob() and opvpEndJob() functions are called between an enclosing pair of the opvpStartJob() and opvpEndJob() functions. If a printer or printer driver does not support nested printing jobs, the driver MUST return an error and set the detailed error code to OPVP_BADREQUEST. After a caller calls the opvpStartJob() function, the caller MUST call the opvpEndJob() function to finish a printing job before calling the opvpStartJob() function again. If a caller does not call the opvpEndJob() function and does not finish a printing job before calling the opvpStartJob() function again, the driver MUST return an error and set the detailed error code to OPVP_BADREQUEST.~~

37 Return Value

38 `OPVP_OK` or `-1` in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

39 4.2.2.opvpEndJob

40 Name

41 `opvpEndJob` – Declares the end of a printing job.

42 Synopsis

```
43    opvp_result_t opvpEndJob(
44         opvp_dc_t printerContext);
```

45 Arguments

46 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

1 Description

2 This function declares the end of a printing job.

3 The caller MUST call this function after it finishes processing a printing job.

4 Return Value

5 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

6 4.2.3.opvpAbortJob**7 Name**

8 opvpAbortJob – Terminates a printing job.

9 Synopsis

```
10     opvp_result_t opvpAbortJob(  
11        opvp_dc_t printerContext);
```

12 Arguments

13 printerContext – Printer context value returned by the opvpOpenPrinter() function.

14 Description

15 This function aborts a printing job and returns both the printer and the driver to their initial state. After this function has been
16 called, the next printing job MUST be accepted normally. Whether the driver creates printing data and whether any printing
17 data is sent to the printer is implementation dependent. As a result, this function can not guarantee that no consumables are
18 used.

19 If a caller calls the opvpEndJob() function after calling this function, the driver MUST return an error and set the detailed
20 error code to OPVP_BADREQUEST.

21 Return Value

22 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

23 4.2.4.opvpStartDoc**24 Name**

25 opvpStartDoc – Declares the start of a printing document.

26 Synopsis

```
27     opvp_result_t opvpStartDoc(  
28        opvp_dc_t printerContext,  
29        const opvp_char_t *docInfo);
```

30 Arguments

31 printerContext – Printer context value returned by the opvpOpenPrinter() function.

32 docInfo – Printing document property string.

33 Description

34 This function declares the start of a printing document.

35 The caller **shouldMUST** call this function after calling the opvpStartJob() function, and **MUST** before calling the
36 opvpStartPage() function or any other drawing API entries. However, if a printing job consists of only one document, the
37 caller can omit calling the opvpStartDoc() and opvpEndDoc() functions.

38 The caller can set document properties via docInfo. The printer driver MUST keep the given document properties until the
39 opvpEndDoc() function is called. When the caller calls the opvpStartDoc() function again after calling the
40 opvpEndDoc() function, the driver MUST override the former docInfo with the new docInfo specified by the latest
41 opvpStartDoc() function call.

42 If the caller passes NULL for the docInfo, the printer driver **SHOULDMUST** use **its the default printing document jobInfo**
43 properties. The data format of docInfo is described in the section "Attributes for Job, Document and Page Operations" in this
44 document.

45 It depends on printer and driver capabilities whether nested documents are supported. A nested document is one where the

1 ~~opvpStartDoc () and opvpEndDoc () functions are called between an enclosing pair of opvpStartDoc () and~~
 2 ~~opvpEndDoc () functions. If a printer or printer driver does not support nested documents, the driver MUST return an error~~
 3 ~~and set the detailed error code to OPVP_BADREQUEST. After a caller calls the opvpStartDoc () function, the caller MUST~~
 4 ~~call the opvpEndDoc () function to declare the end of a printing document before calling the opvpStartDoc () function~~
 5 ~~again. If a caller does not call the opvpEndDoc () function and does not declare the end of a printing document before calling~~
 6 ~~the opvpStartDoc () function again, the driver MUST return an error and set the detailed error code to~~
 7 ~~OPVP_BADREQUEST.~~

8

9 **Return Value**

10 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

11 **4.2.5.opvpEndDoc**

12 **Name**

13 opvpEndDoc – Declares the end of a printing document

14 **Synopsis**

```
15    opvp_result_t opvpEndDoc(  
16         opvp_dc_t printerContext);
```

17 **Arguments**

18 printerContext – Printer context value returned by the opvpOpenPrinter () function.

19 **Description**

20 This function declares the end of a printing document.

21 If the caller called the opvpStartDoc () function, it MUST call this function after it finishes processing a document.

22 If a printing job consists of one document, the caller can omit calling the opvpStartDoc () and opvpEndDoc () functions.

23 **Return Value**

24 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

25 **4.2.6.opvpStartPage**

26 **Name**

27 opvpStartPage – Declares the start of a printing page.

28 **Synopsis**

```
29    opvp_result_t opvpStartPage(  
30         opvp_dc_t printerContext,  
31         const opvp_char_t *pageInfo);
```

32 **Arguments**

33 printerContext – Printer context value returned by the opvpOpenPrinter () function.

34 pageInfo – Printing page property string.

35 **Description**

36 This function declares the start of a printing page.

37 The caller MUST call this function after calling the opvpStartJob () and opvpStartDoc () functions, and before calling
 38 any other drawing API entries.

39 The caller can set page properties via pageInfo. The printer driver MUST keep the page properties until the
 40 opvpEndPage () function is called. When the caller calls the opvpStartPage () function again after calling the
 41 opvpEndPage () function, the printer driver MUST override the former pageInfo with the new pageInfo specified by
 42 the latest opvpStartPage () function call.

43 If the caller passes NULL as the pageInfo, the printer driver SHOULD use it as the default pagedocInfo properties. The
 44 data format of pageInfo is described in the section "Attributes for Job, Document and Page Operations" in this document.

1 | After a caller calls the `opvpStartPage()` function, the caller MUST call the `opvpEndPage()` function to declare the end
2 | of a printing page before calling the `opvpStartPage()` function again. If a caller does not call the `opvpEndPage()`
3 | function and does not declare the end of a printing page before calling the `opvpStartPage()` function again, the driver
4 | MUST return an error and set the detailed error code to `OPVP_BADREQUEST`.

5 | **Return Value**

6 | `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

7 | **4.2.7.opvpEndPage**

8 | **Name**

9 | `opvpEndPage` – Declares the end of a printing page.

10 | **Synopsis**

```
11 |     opvp_result_t opvpEndPage(  
12 |             opvp_dc_t printerContext);
```

13 | **Arguments**

14 | `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

15 | **Description**

16 | This function declares the end of a printing page.

17 | The caller MUST call this function after it finishes processing a page.

18 | **Return Value**

19 | `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

20

1 4.3.Query Operations

2 This section defines functions to query device capabilities and information. Driver support for these functions is
 3 | **OPTIONALRECOMMENDED**.

4 4.3.1.opvpQueryDeviceCapability

5 **Name**

6 opvpQueryDeviceCapability – Queries for device capabilities.

7 **Synopsis**

```
8    opvp_result_t opvpQueryDeviceCapability(
9         opvp_dc_t printerContext,
10        opvp_queryinfoflags_t queryflag,
11        opvp_int_t *buflen,
12        opvp_char_t *infoBuf);
```

13 **Arguments**

14 printerContext – Printer context value returned by the opvpOpenPrinter() function.

15 queryflag – Flag specifying which device capability to query.

16 buflen – Number of bytes of the buffer pointed to by *infoBuf.

17 infoBuf – Pointer to the buffer to store the device capability.

18 **Description**

19 This function queries the capabilities that are supported by the printer or driver.

20 The caller MUST set one or more bits of queryflag to query capabilities. The values in the following enumeration should
 21 | be supported by the driver:

```
22    typedef enum _opvp_queryinfoflags {
23         OPVP_QF_DEVICERESOLUTION         = 0x00000001,
24         OPVP_QF_MEDIASIZE                 = 0x00000002,
25         OPVP_QF_PAGEROTATION               = 0x00000004,
26         OPVP_QF_MEDIANUP                  = 0x00000008,
27         OPVP_QF_MEDIADUPLEX               = 0x00000010,
28         OPVP_QF_MEDIASOURCE              = 0x00000020,
29         OPVP_QF_MEDIADESTINATION        = 0x00000040,
30         OPVP_QF_MEDIATYPE                = 0x00000080,
31         OPVP_QF_MEDIACOPY                = 0x00000100, /* Maximum copy number supported */
32         OPVP_QF_PRINTREGION             = 0x00010000 /* only for opvpQueryDeviceInfo use */
33    } opvp_queryinfoflags_t;
```

34 The driver MUST return the queried capabilities in ASCII text format via the infoBuf buffer, and also return the number of
 35 | bytes of this text via *buflen. If the buffer is too small to store the query result, the driver MUST return the necessary
 36 | number of bytes to retrieve the query result in *buflen, return an error and set the detailed error code to
 37 | OPVP_PARAMERROR. If the caller passes NULL as the infoBuf buffer, the driver MUST return the number of bytes required
 38 | to store the query result via *buflen.

40 The format of the capability name-value pairs stored in the infoBuf buffer is the same as that of the jobInfo used with the
 41 | opvpStartJob() function. For example, when querying for the device resolution, a resolution list similar to the following
 42 | may be returned. The first name-value pair in the list indicates the default.

43 updf:DeviceResolution=deviceResolution_600x600,deviceResolution_1200x1200

44 In case of OPVP_QF_MEDIACOPY, a driver MUST return the maximum MediaCopy number that a printer supports.

46 **Return Value**

47 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

1 **4.3.2.opvpQueryDeviceInfo**

2 **Name**

3 opvpQueryDeviceInfo – Queries for device information.

4 **Synopsis**

```
5   opvp_result_t opvpQueryDeviceInfo(
6     opvp_dc_t printerContext,
7     opvp_queryinfoflags_t queryflag,
8     opvp_int_t *buflen,
9     opvp_char_t *infoBuf);
```

10 **Arguments**

11 printerContext – Printer context value returned by the opvpOpenPrinter() function.

12 queryflag – Flag specifying which device information to query.

13 buflen – Number of bytes of the buffer pointed to by *infoBuf.

14 infoBuf – Pointer to the buffer to store the device information.

15 **Description**

16 This function queries for information about the current settings of the printer or driver.

17

18 The caller MUST set one or more bits of queryflag to query for information. Values of the same enumeration used for the
19 opvpQueryDeviceCapability() function MUST be used.


20

21 The driver MUST return the queried information in ASCII text format into the infoBuf buffer, and also return the number of
22 bytes of this text via *buflen. If the buffer is too small to store the query result, the driver MUST return the necessary
23 number of bytes to retrieve the query result in *buflen, return an error and set the detailed error code OPVP_PARAMERROR.
24 If the caller passes NULL as the infoBuf pointer, the driver MUST return the number of bytes required to store the query
25 result via *buflen.

26 The format of the information name-value pairs stored in the infoBuf buffer is the same as that of the jobInfo used with
27 the opvpStartJob() function.

28 When the caller sets the OPVP_QF_PRINTREGION bit of the queryflag, the driver MUST provide the printable area using
29 the current resolution setting. The printable area format MUST be as given below. The values correspond to the x and y
30 coordinates of the left top and right bottom corners, respectively, of the current printable area setting as shown in the figure.
31 These values depend on the current media orientation setting.

32 PrintRegion=xmin,ymin,xmax,ymax

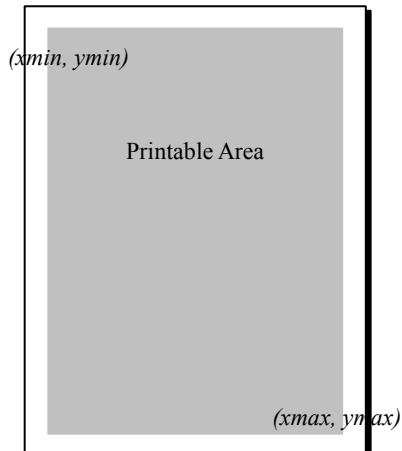

33

34

35

36

37

38

39

40

41

42

43

44 **Return Value**

45 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

1 | 4.4.Attributes for Job, Document and Page Operations

2 | 4.4.1.Attributes for Job, Document and Page Operations

3 | Attributes for printing jobs, documents and pages can be passed as arguments to the `opvpStartJob()`, `opvpStartDoc()`
 4 | ~~and `opvpStartPage()` and `opvpQueryDeviceCapability()`~~ functions. Supported attributes are provided by a
 5 | ~~printer database form which depends on a printing system or a printer driver~~
 6 | ~~database file distributed with the driver~~.
 7 |

8 | Attribute names and values MUST be specified as ASCII strings in the following format;

9 | `<schema>:<key>=<value>{,<value>}*{;<key>=<value>{,<value>}*{}`

- 10 | • `<schema>`: Name space for the following `<key>` and `<value>`.
- 11 | • `<key>`: Name of the attribute.
- 12 | • `<value>`: Value for given `<key>`.

13 | Multiple `<value>`s for a `<key>` MUST be separated by a ";" (comma). When multiple values are specified for a single key, the
 14 | printer driver ~~should~~MUST search the list of values starting with the first value and use the first value that the driver can use
 15 | with the current settings. Treatment of two or more key and value pairs that are inconsistent with each other depends on the
 16 | device or driver implementation. If a driver returns an error, the driver MUST set the detailed error code to
 17 | `OPVP_PARAMERROR`.

18 | Multiple key-value pairs, `<key>=<value>{,<value>}*`, MUST be separated by a ":" (semi-colon).

19 | Conforming drivers MUST support a "updf" `<scheme>` as defined in IEEE-ISTO PWG 5101.4 "Universal Printer Definition
 20 | Format" (May 2004) developed by the Printer Working Group.

21 | Conforming drivers MUST ignore unknown properties to maintain compatibility with future vendor or standard extensions.

22 | Major UPDF attributes are shown in the table below:

Attribute	Name	Value	Effective in		
			Job	Doc	Page
Orientation	MediaPageRotation	landscape portrait reverse-landscape reverse-portrait	✓	✓	✓
Page Size	MediaSize	iso_a4_210x297mm iso_a3_297x420mm jpn_hagaki_100x148mm ...	✓	✓	✓
Number Up	MediaNUp	nup-1x1 nup-2x1 nup-2x2 ...	✓	✓	✓
Duplex	MediaDuplex	simplex duplex-long-edge duplex-short-edge	✓	✓	✓
Resolution	DeviceResolution	deviceResolution_1200x1200 deviceResolution_600x600 ...	✓	✓	✓
input-bin	MediaSource	manual continuous roll cut-sheet proprietary-value device-setting	✓	✓	✓
output-bin	MediaDestination	standard proprietary-value device-setting	✓	✓	✓
Media Type	MediaType	cardstock continuous stationery stationery-fine	✓	✓	✓

Attribute	Name	Value	Effective in		
			Job	Doc	Page
Media Copy	MediaCopy	...	✓	✓	
Print Quality	PrintQuality	draft high normal	✓	✓	✓

1

2 | **4.4.2.Attributes Override**

3 |

4 | Between `opvpStartPage()` and `opvpEndPage()` function calls, page attributes take precedence over document
 5 | attributes. Similarly, between `opvpStartDoc()` and `opvpEndDoc()` function calls, document attributes take precedence
 6 | over job attributes. For example, a three page job with a landscape orientation attribute passed to the `opvpStartJob()`
 7 | function and a portrait orientation attribute passed to the `opvpStartPage()` function for its second page will use a
 8 | landscape orientation for the first page and third page but the second page will use portrait.

9 |

1 4.5.Graphics State Object Operations

2 This section defines functions that operate on the properties or drawing attributes of a Graphics State Object. Driver support for
3 any of these functions is OPTIONAL.

4 4.5.1.opvpResetCTM

5 **Name**

6 opvpResetCTM – Initializes the CTM of a Graphics State Object.

7 **Synopsis**

8 `opvp_result_t opvpResetCTM(
9 opvp_dc_t printerContext);`

10 **Arguments**

11 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

12 **Description**

13 This function initializes the CTM of a Graphics State Object. The initial value of a CTM is the identity matrix:

$$\begin{bmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix}$$

15 **Return Value**

16 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

17 4.5.2.opvpSetCTM

18 **Name**

19 opvpSetCTM – Sets the CTM of a Graphics State Object.

20 **Synopsis**

21 `opvp_result_t opvpSetCTM(
22 opvp_dc_t printerContext,
23 const opvp_ctm_t *pCTM);`

24 **Arguments**

25 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

26 `pCTM` – Pointer to an `opvp_ctm_t` structure holding the six CTM elements a, b, c, d, e and f.

27 **Description**

28 This function sets the CTM of a Graphics State Object.

29 The printer (device) coordinate system coordinates $[x_{dev} \ y_{dev}]$ and the caller (renderer) coordinate system coordinates
30 $[x_{ren} \ y_{ren}]$ are related via the CTM as shown in the following equation:

$$31 \begin{bmatrix} x_{dev} & y_{dev} & 1 \end{bmatrix} = \begin{bmatrix} x_{ren} & y_{ren} & 1 \end{bmatrix} \times \begin{bmatrix} a & b & 0 \\ c & d & 0 \\ e & f & 1 \end{bmatrix}$$

32 **Structures**

33 `typedef struct _opvp_ctm {
34 opvp_float_t a, b, c, d, e, f;
35 } opvp_ctm_t;`

1 Return Value

2 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

3 4.5.3.opvpGetCTM**4 Name**

5 opvpGetCTM – Gets the CTM of a Graphics State Object.

6 Synopsis

```
7   opvp_result_t opvpGetCTM(  
8       opvp_dc_t printerContext;  
9       opvp_ctm_t *pCTM);
```

10 Arguments

11 printerContext – Printer context value returned by the opvpOpenPrinter() function.

12 pCTM – Pointer to an opvp_ctm_t structure to receive the six CTM elements a, b, c, d, e and f.

13 Description

14 This function gets the CTM of a Graphics State Object.

15 Structures

```
16   typedef struct _opvp_ctm {  
17     opvp_float_t a, b, c, d, e, f;  
18 } opvp_ctm_t;
```

19 Return Value

20 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

21 4.5.4.opvpInitGS**22 Name**

23 opvpInitGS – Initializes the parameters of a Graphics State Object.

24 Synopsis

```
25   opvp_result_t opvpInitGS(  
26       opvp_dc_t printerContext);
```

27 Arguments

28 printerContext – Printer context value returned by the opvpOpenPrinter() function.

29 Description

30 This function initializes the parameters of the currently active Graphics State Object. The Graphics State is a set of values
31 managed by the printer driver and contains parameters for drawing color, drawing mode and other, drawing related, settings.
32 The driver MUST keep the current parameters of a Graphics State Object unless opvpInitGS() or other parameter setting
33 functions are called. Also, the driver MUST save all parameters in the Graphics State Object onto the driver's stack when the
34 caller calls the opvpSaveGS() function, and restore all parameters from the stack to the Graphics State Object when the
35 caller calls the opvpRestoreGS() function. These two functions are described later in this document. These operations are
36 used to change the parameters in the Graphics State Object temporarily and restore them after drawing operations.

37 The driver MUST keep the Graphics State Object parameters between opvpStartJob() and opvpEndJob(), unless
38 opvpInitGS() or other parameter setting functions are called. When the caller calls the opvpStartJob() function, the
39 driver MUST set the same parameters as the opvpInitGS() sets.

40 Return Value

41 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

1 **4.5.5.opvpSaveGS**2 **Name**

3 opvpSaveGS – Saves the Graphics State Object parameters.

4 **Synopsis**5

```
opvp_result_t opvpSaveGS(
6         opvp_dc_t printerContext);
```

7 **Arguments**

8 printerContext – Printer context value returned by the opvpOpenPrinter() function.

9 **Description**10 | This function saves the Graphics State Object parameters onto the driver's stack. [The number of the stack depends on the device or driver implementation. When a caller calls this function but the driver can not save the Graphics State Object parameters anymore, the driver MUST return an error and set the detailed error code to OPVP_BADREQUEST.](#)

13 |
14 |

15 **Return Value**

16 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

17 **4.5.6.opvpRestoreGS**18 **Name**

19 opvpRestoreGS – Restores Graphics State Object parameters.

20 **Synopsis**21

```
opvp_result_t opvpRestoreGS(
22         opvp_dc_t printerContext);
```

23 **Arguments**

24 printerContext – Printer context value returned by the opvpOpenPrinter() function.

25 **Description**

26 This function retrieves Graphics State Object parameters from the driver's stack and restores them into the current Graphics State Object.

28 | This function MUST return [an](#) error and set the error code OPVP_BADREQUEST in opvpErrorNo if the stack is empty.29 **Return Value**

30 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

31 **4.5.7.opvpQueryColorSpace**32 **Name**

33 opvpQueryColorSpace – Queries the driver for supported color spaces.

34 **Synopsis**35

```
opvp_result_t opvpQueryColorSpace(
36         opvp_dc_t printerContext,
37         opvp_int_t *pnum,
38         opvp_cspace_t *pcspace);
```

39 **Arguments**

40 printerContext – Printer context value returned by the opvpOpenPrinter() function.

41 pnum – Number of elements in pcspace.

1 pcSpace – Pointer to an array of supported color spaces.

2 **Description**

3 This function queries the driver for a list of supported color spaces.

4
5 To query for the supported color spaces , the caller MUST set the number of pcSpace elements into *pnum. In this case, the
6 driver MUST return the supported color spaces in the pcSpace array and also return the number of supported color spaces
7 retrieved in *pnum.

8 If the caller sets NULL in *pcSpace, the driver MUST return only the number of supported color spaces in *pnum.

9 If the number of supported color spaces exceeds the number of pcSpace array elements prepared by the caller, the driver
10 MUST return the necessary number to retrieve all supported color spaces in *pnum, return an error and set the detailed error
11 code to OPVP_PARAMERROR.

12 | The driver SHOULD return the supported color spaces in order of preference. The first supported color spaces is the most
13 preferred color space for the driver.

14 **Return Value**

15 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

16 **4.5.8.opvpSetColorSpace**

17 **Name**

18 opvpSetColorSpace – Sets the color space of a Graphics State Object.

19 **Synopsis**

```
20     opvp_result_t opvpSetColorSpace(
21         opvp_dc_t printerContext,
22         opvp_cspace_t cspace);
```

23 **Arguments**

24 printerContext – Printer context value returned by the opvpOpenPrinter() function.

25 cspace – Color space value.

26 **Description**

27 This function sets the color space of a Graphics State Object.

28 The color space passed by the caller via cspace MUST be one of the color spaces returned by the
29 | opvpQueryColorSpace() function.

30 **Return Value**

31 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

32 **4.5.9.opvpGetColorSpace**

33 **Name**

34 opvpGetColorSpace – Gets the current color space from a Graphics State Object.

35 **Synopsis**

```
36     opvp_result_t opvpGetColorSpace(
37         opvp_dc_t printerContext,
38         opvp_cspace_t *pcspace);
```

39 **Arguments**

40 printerContext – Printer context value returned by the opvpOpenPrinter() function.

41 pcSpace – Pointer to the color space value to be returned.

42 **Description**

43 This function gets the color space that is currently set in a Graphics State Object.

1
2 The initial color space of a Graphics State Object is driver dependent.

3 **Return Value**
4 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

5 **4.5.10.opvpSetFillMode**

6 **Name**
7 opvpSetFillMode – Sets the filling mode of a Graphics State Object.

8 **Synopsis**
9 opvp_result_t opvpSetFillMode(
10 opvp_dc_t printerContext,
11 opvp_fillmode_t fillmode);

12 **Arguments**
13 printerContext – Printer context value returned by the opvpOpenPrinter() function.
14 fillmode – Filling mode enumeration value. OPVP_FILLMODE_EVENODD (even-odd rule) and
15 OPVP_FILLMODE_WINDING (non-zero winding number rule) can be set.

16 **Description**
17 This function sets the filling mode of a Graphics State Object.

18 **Return Value**
19 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

20 **4.5.11.opvpGetFillMode**

21 **Name**
22 opvpGetFillMode – Gets the filling mode from a Graphics State Object.

23 **Synopsis**
24 opvp_result_t opvpGetFillMode(
25 opvp_dc_t printerContext,
26 opvp_fillmode_t *pfillmode);

27 **Arguments**
28 printerContext – Printer context value returned by the opvpOpenPrinter() function.
29 pfillmode – Pointer to the fill mode enumeration value to be returned.

30 **Description**
31 This function gets the filling mode that is currently set in a Graphics State Object.
32 The initial filling mode of a Graphics State Object is driver dependent.

33
34 **Return Value**
35 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

36 **4.5.12.opvpSetAlphaConstant**

37 **Name**
38 opvpSetAlphaConstant – Sets the alpha blending constant of a Graphics State Object.

39 **Synopsis**
40 opvp_result_t opvpSetAlphaConstant(

```
1     opvp_dc_t printerContext,
2     opvp_float_t alpha);
```

3 **Arguments**

4 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

5 alpha – Alpha blending constant. This MUST be a value between 0.0 and 1.0.

6 **Description**

7 This function sets the alpha blending constant, which is transparent ratio, of a Graphics State Object. The value of `alpha`
8 MUST be between 0.0 and 1.0. If the value specified by the caller is outside of this range, the driver SHOULD use the nearest
9 value that is within range.

10 **Return Value**

11 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

12 **4.5.13.opvpGetAlphaConstant**

13 **Name**

14 `opvpGetAlphaConstant` – Gets the alpha blending constant from a Graphics State Object.

15 **Synopsis**

```
16 opvp_result_t opvpGetAlphaConstant (
17     opvp_dc_t printerContext,
18     opvp_float_t *palpha);
```

19 **Arguments**

20 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

21 `palpa` – Pointer to the alpha constant value to be returned.

22 **Description**

23 This function gets the alpha constant value that is currently set in a Graphics State Object.

24 The initial alpha blending constant of a Graphics State Object is driver dependent.

25

26 **Return Value**

27 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

28 **4.5.14.opvpSetLineWidth**

29 **Name**

30 `opvpSetLineWidth` – Sets the line width of a Graphics State Object.

31 **Synopsis**

```
32 opvp_result_t opvpSetLineWidth (
33     opvp_dc_t printerContext,
34     opvp_fix_t width);
```

35 **Arguments**

36 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

37 `width` – Line width value.

38 **Description**

39 This function sets line width for stroke operations by a Graphics State Object. The line width MUST be set in caller coordinate
40 system unit.

41 Treatment of line widths less than one depends on the device or driver implementation. Similarly, the maximum line width that
42 can be set also depends on the device or driver implementation. [Whether the driver returns an error or not in case of the line](#)
43 [width is less than one or greater than maximum line width depends on the device or driver implementation.](#)

1 **Return Value**

2 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

3 **4.5.15.opvpGetLineWidth**4 **Name**

5 opvpGetLineWidth – Gets the line width from a Graphics State Object.

6 **Synopsis**7

```
opvp_result_t opvpGetLineWidth(
8         opvp_dc_t printerContext,
9         opvp_fix_t *pwidth);
```

10 **Arguments**

11 printerContext – Printer context value returned by the opvpOpenPrinter() function.

12 pwidth – Pointer to the line width value to be returned.

13 **Description**14 This function gets the line width for stroke operations from a Graphics State Object. The line width value MUST be in caller
15 coordinate system unit.

16 The initial line width of a Graphics State Object is driver dependent.

17

18 **Return Value**

19 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

20 **4.5.16.opvpSetLineDash**21 **Name**

22 opvpSetLineDash – Sets the line dash pattern of a Graphics State Object.

23 **Synopsis**24

```
opvp_result_t opvpSetLineDash(
25         opvp_dc_t printerContext,
26         opvp_int_t num,
27         const opvp_fix_t *pdash);
```

28 **Arguments**

29 printerContext – Printer context value returned by the opvpOpenPrinter() function.

30 num – Number of elements in pdash .

31 pdash – Pointer to the line dash pattern array.

32 **Description**

33 This function sets a line dash pattern for use by a Graphics State Object.

34 When the painting mode is OPVP_PAINTMODE_OPAQUE (opaque mode), the odd numbered (1st, 3rd, 5th, 7th ...) elements of
35 the pdash array indicate the length for dashes in the color set by the opvpSetStrokeColor() function and the even
36 numbered (2nd, 4th, 6th, 8th...) elements indicate the length for dashes in the color set by the opvpSetBgColor() function.37 When the painting mode is OPVP_PAINTMODE_TRANSPARENT (transparent mode), the odd numbered (1st, 3rd, 5th, 7th ...) elements of
38 the pdash array indicate the length for dashes in the color set by the opvpSetStrokeColor() function and the even numbered
39 (2nd, 4th, 6th, 8th...) elements indicate the length of line segments that are not painted.

40 The lengths set in the pdash array MUST be in caller coordinate system unit.

41 If the number of elements of the pdash array is odd, the dash pattern is created as if the number of elements is double the
42 number of elements of the array. In this case, the first element of the pdash array in the second cycle is treated as the length
43 for background color dashes in case of opaque mode and for non-painted line segments in case of transparent mode.

44 The maximum number of elements that can be set depends on the device or driver implementation.

1 If the caller passes zero for num, the driver MUST draw solid lines.

2 **Return Value**

3 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

4 **4.5.17.opvpGetLineDash**

5 **Name**

6 opvpGetLineDash – Gets the line dash pattern of a Graphics State Object.

7 **Synopsis**

```
8     opvp_result_t opvpGetLineDash(
9         opvp_dc_t printerContext,
10        opvp_int_t *pnum,
11        opvp_fix_t *pdash);
```

13 **Arguments**

14 printerContext – Printer context value returned by the opvpOpenPrinter() function.

15 pnum – Pointer to the number of elements in pdash.

16 pdash – Pointer to the buffer to store the line dash pattern array.

17 **Description**

18 This function gets the line dash pattern from a Graphics State Object.

19 If the caller sets NULL in *pdash, the driver MUST return only the number of the dash pattern elements in *pnum.

20 If the caller sets a non-NULL value in *pdash, the caller MUST also set the number of pdash elements into *pnum. In this
21 case, the driver MUST return the dash pattern in the pdash array and also return the number of dash pattern elements retrieved
22 in *pnum.

23 If the number of dash pattern elements exceeds the number of pdash array elements prepared by the caller, the driver MUST
24 return the necessary number to retrieve all the dash pattern elements in *pnum, return an error and set the detailed error code to
25 OPVP_PARAMERROR.

26 The initial line dash pattern of a Graphics State Object is driver dependent.

27 **Return Value**

28 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

29 **4.5.18.opvpSetLineDashOffset**

30 **Name**

31 opvpSetLineDashOffset – Sets the line dash pattern offset of a Graphics State Object.

32 **Synopsis**

```
33     opvp_result_t opvpSetLineDashOffset(
34         opvp_dc_t printerContext,
35         opvp_fix_t offset);
```

36 **Arguments**

37 printerContext – Printer context value returned by the opvpOpenPrinter() function.

38 offset – Offset value of the line dash pattern.

39 **Description**

40 This function sets the offset value of the line dash pattern for stroke operations in caller coordinate system unit.

41 **Return Value**

42 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

1 **4.5.19.opvpGetLineDashOffset**2 **Name**

3 opvpGetLineDashOffset – Gets the line dash pattern offset of a Graphics State Object.

4 **Synopsis**5

```
opvp_result_t opvpGetLineDashOffset(
6         opvp_dc_t printerContext,
7         opvp_fix_t *poffset);
```

8 **Arguments**

9 printerContext – Printer context value returned by the opvpOpenPrinter() function.

10 poffset – Pointer to the offset value of the line dash pattern to be returned.

11 **Description**

12 This function gets the offset value of the line dash pattern from a Graphics State Object.

13 The initial line dash pattern offset of a Graphics State Object is driver dependent.

14

15 **Return Value**

16 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

17 **4.5.20.opvpSetLineStyle**18 **Name**

19 opvpSetLineStyle – Sets the line style of a Graphics State Object.

20 **Synopsis**21

```
opvp_result_t opvpSetLineStyle(
22         opvp_dc_t printerContext,
23         opvp_linestyle_t linestyle);
```

24 **Arguments**

25 printerContext – Printer context value returned by the opvpOpenPrinter() function.

26 linestyle – Line style enumeration value. OPVP_LINESTYLE_SOLID (solid line) and OPVP_LINESTYLE_DASH (dashed line) can be set.

28 **Description**

29 This function sets the line style of a Graphics State Object.

30 **Return Value**

31 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

32 **4.5.21.opvpGetLineStyle**33 **Name**

34 opvpGetLineStyle – Gets the line style of a Graphics State Object.

35 **Synopsis**36

```
opvp_result_t opvpGetLineStyle(
37         opvp_dc_t printerContext,
38         opvp_linestyle_t *plinestyle);
```

39 **Arguments**

40 printerContext – Printer context value returned by the opvpOpenPrinter() function.

41 plinestyle – Pointer to the line style enumeration value to be returned.

1 Description

2 This function gets the line style from a Graphics State Object.

3 The initial line style of a Graphics State Object is driver dependent.

4

5 Return Value

6 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

7 **4.5.22.opvpSetLineCap****8 Name**

9 opvpSetLineCap – Sets the line cap style of a Graphics State Object.

10 Synopsis


```
11     opvp_result_t opvpSetLineCap(  
12         opvp_dc_t printerContext,  
13         opvp_linecap_t linecap);
```

14 Arguments


15 printerContext – Printer context value returned by the opvpOpenPrinter() function.

16 linecap – Line cap style enumeration value. OPVP_LINECAP_BUTT (butt cap), OPVP_LINECAP_ROUND (round cap)
17 and OPVP_LINECAP_SQUARE (square projection cap) can be set.


18

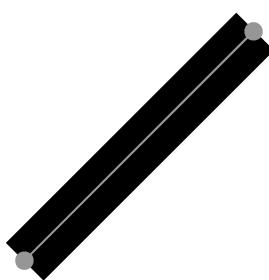

Butt cap

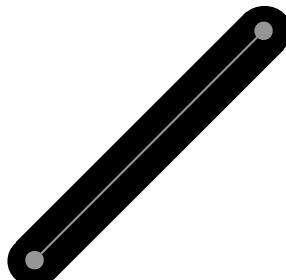

Round cap

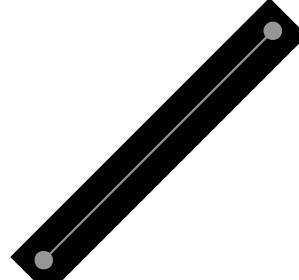

Square projection cap

20 Description

21 This function sets the line cap style of a Graphics State Object.

22 The line cap style specifies the shape at the end of opened paths, and also specifies the shapes at the end of each dashes.

23 Return Value

24 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

25 **4.5.23.opvpGetLineCap****26 Name**

27 opvpGetLineCap – Gets the line cap style of a Graphics State Object.

28 Synopsis

```
29     opvp_result_t opvpGetLineCap(  
30         opvp_dc_t printerContext,  
31         opvp_linecap_t *plinecap);
```

32 Arguments

33 printerContext – Printer context value returned by the opvpOpenPrinter() function.

34 plinecap – Pointer to the line cap style enumeration value to be returned.

1 Description

2 This function gets the line cap style of a Graphics State Object.

3 The initial line cap style of a Graphics State Object is driver dependent.

4

5 Return Value

6 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

7 4.5.24.opvpSetLineJoin**8 Name**

9 opvpSetLineJoin – Sets the line join style of a Graphics State Object.

10 Synopsis

```
11     opvp_result_t opvpSetLineJoin(  
12         opvp_dc_t printerContext,  
13         opvp_linejoin_t linejoin);
```


14 Arguments

15 printerContext – Printer context value returned by the opvpOpenPrinter() function.

16 linejoin – Line join style enumeration value. OPVP_LINEJOIN_MITER (miter join), OPVP_LINEJOIN_ROUND
17 (round join) and OPVP_LINEJOIN_BEVEL (bevel join) can be set.

18 Description

19 This function sets the line join style of a Graphics State Object.

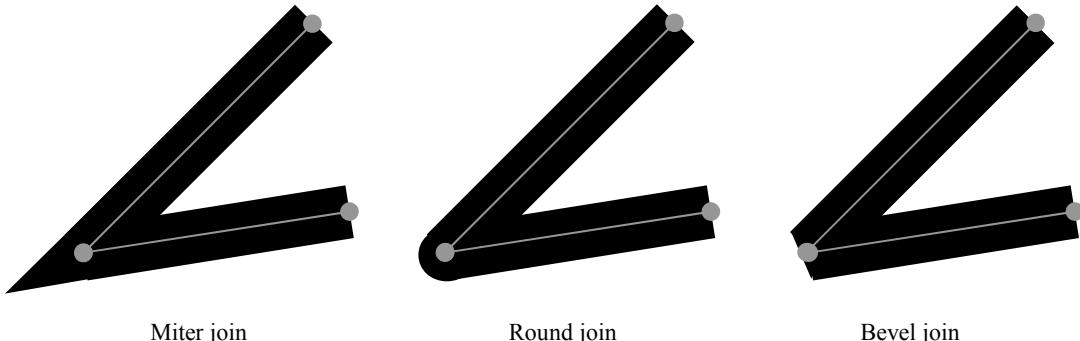

Miter join

Round join

Bevel join

22 Return Value

23 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

24 4.5.25.opvpGetLineJoin**25 Name**

26 opvpGetLineJoin – Gets the line join style of a Graphics State Object.

27 Synopsis

```
28     opvp_result_t opvpGetLineJoin(  
29         opvp_dc_t printerContext,  
30         opvp_linejoin_t *plinejoin);
```

31 Arguments

32 printerContext – Printer context value returned by the opvpOpenPrinter() function.

33 plinejoin – Pointer to the line join style enumeration value to be returned.

34 Description

35 This function gets the line join style of a Graphics State Object.

1 The initial line join style of a Graphics State Object is driver dependent.

2

3 **Return Value**


4 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

5 **4.5.26.opvpSetMiterLimit**

6 **Name**

7 opvpSetMiterLimit – Sets the miter limit value of a Graphics State Object.

$$\text{Miter Limit} = \frac{\text{Miter Length}}{\text{LineWidth}} = \frac{1}{\sin(\frac{\varphi}{2})}$$

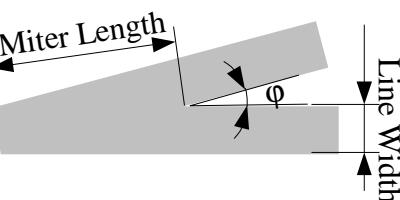

8 **Synopsis**

```
9     opvp_result_t opvpSetMiterLimit(
10         opvp_dc_t printerContext,
11         opvp_fix_t miterlimit);
```

12 **Arguments**

13 printerContext – Printer context value returned by the
14 opvpOpenPrinter() function.

15 miterlimit – Maximum miter length.

16 **Description**

17 This function sets the maximum length of the miter created by a Graphics State Object. The miter limit is effective only when
18 the line join style is OPVP_LINEJOIN_MITER. The length MUST be set in caller coordinate system unit.

19 **Return Value**

20 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

21 **4.5.27.opvpGetMiterLimit**

22 **Name**

23 opvpGetMiterLimit – Gets the miter limit value of a Graphics State Object.

24 **Synopsis**

```
25     opvp_result_t opvpGetMiterLimit(
26         opvp_dc_t printerContext,
27         opvp_fix_t *pmiterlimit);
```

28 **Arguments**

29 printerContext – Printer context value returned by the opvpOpenPrinter() function.

30 pmiterlimit – Pointer to the maximum miter length to be returned.

31 **Description**

32 This function gets the maximum length of miter of a Graphics State Object.

33 The initial miter limit value of a Graphics State Object is driver dependent.

34

35 **Return Value**

36 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

37 **4.5.28.opvpSetPaintMode**

38 **Name**

39 opvpSetPaintMode – Sets the background color painting mode of a Graphics State Object.

1 Synopsis

```
2    opvp_result_t opvpSetPaintMode(
3         opvp_dc_t printerContext,
4         opvp_paintmode_t paintmode);
```

5 Arguments

6 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.
7 paintmode – Painting mode enumeration value. `OPVP_PAINTMODE_OPAQUE` (opaque mode) and
8 `OPVP_PAINTMODE_TRANSPARENT` (transparent mode) can be set.

9 Description

10 This function sets the background color painting mode of a Graphics State Object.

11 Return Value

12 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

13 4.5.29.opvpGetPaintMode**14 Name**

15 `opvpGetPaintMode` – Gets the background color painting mode of a Graphics State Object.

16 Synopsis

```
17   opvp_result_t opvpGetPaintMode(
18         opvp_dc_t printerContext,
19         opvp_paintmode_t *ppaintmode);
```

20 Arguments

21 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.
22 ppaintmode – Pointer to the painting mode enumeration value to be returned.

23 Description

24 This function gets the background color painting mode of a Graphics State Object.
25 The initial painting mode of a Graphics State Object is driver dependent.

26 Return Value

27 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

28 4.5.30.opvpSetStrokeColor**29 Name**

30 `opvpSetStrokeColor` – Sets the stroke color and pattern for the `opvpStrokePath()` and `opvpStrokeFillPath()`
31 operations of a Graphics State Object.

32 Synopsis

```
33   opvp_result_t opvpSetStrokeColor(
34         opvp_dc_t printerContext,
35         const opvp_brush_t *brush);
```

36 Arguments


37 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.
38 brush – Pointer to the `opvp_brush_t` structure data.

39 Description

40 This function sets the color or pattern to be used by the Graphics State Object when drawing strokes as instructed by the
41 `opvpStrokePath()` and `opvpStrokeFillPath()` operations.
42 If the `pbrush` member of the `*brush opvp_brush_t` structure is `NULL`, the driver MUST treat it as a solid brush. In this
43 case, the brush's color value is specified in the `color[]` array of the `*brush opvp_brush_t` structure. The `color[]`

1 array is interpreted according to the brush's `colorSpace`.
 2 If the `pbrush` member of the `*brush opvp_brush_t` structure points to a `opvp_brushdata_t` structure, the driver
 3 MUST treat it as a pattern brush. The `opvp_brushdata_t` structure's `width` and `height` members are specified in pixels,
 4 and the brush pattern's horizontal repetition pitch is specified as a number of bytes. The actual pattern data is specified in the
 5 `data` array. The pattern is interpreted according to the brush's `colorSpace`, and the `color[]` array MUST be ignored.
 6 The `type` member of the `opvp_brushdata_t` structure is intended for future extensions. To maintain compatibility
 7 between the current and future versions of the specification, the caller MUST set this member to `OPVP_BDTYPE_NORMAL` for
 8 the current version of this specification.

9 The initial stroke color of a Graphics State Object is driver dependent.

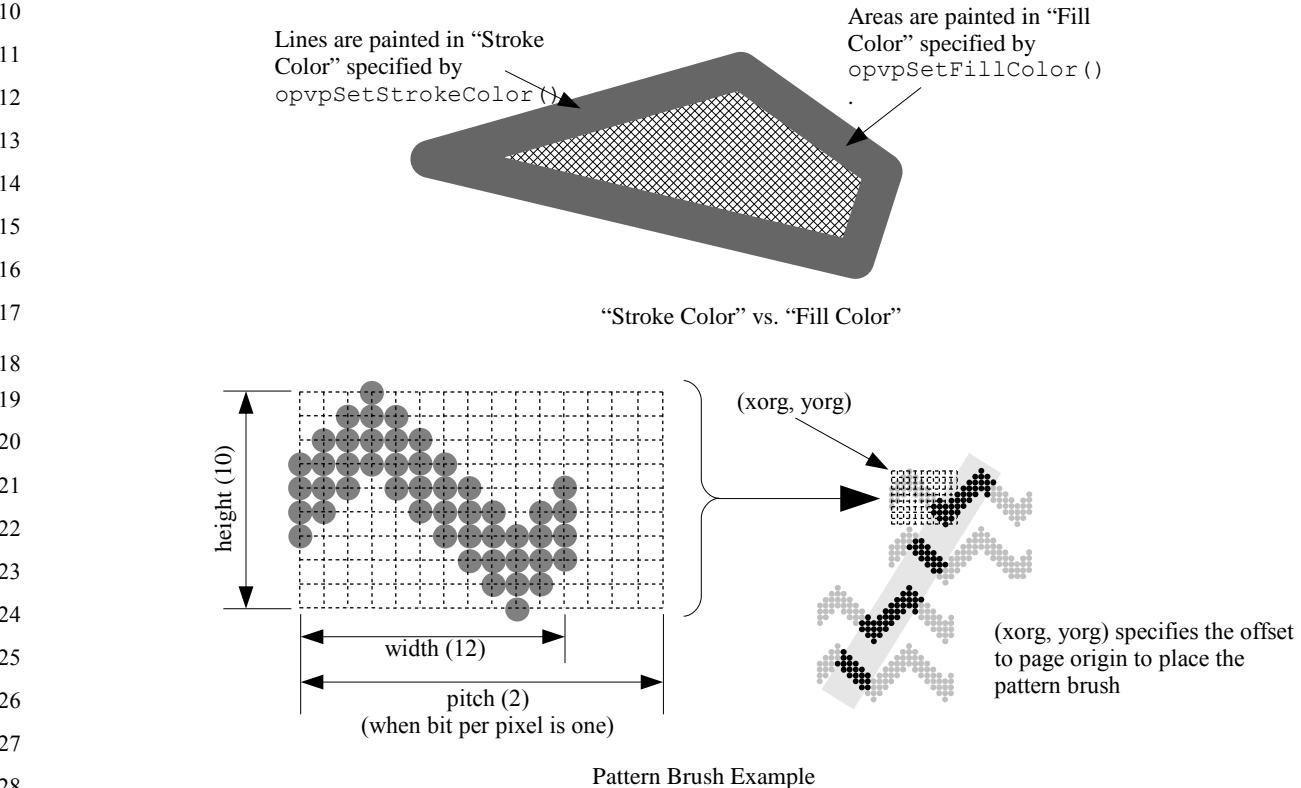

Pattern Brush Example

Structures

```
30 typedef struct _opvp_brushdata {
31     opvp_bdtype_t type;
32     opvp_int_t width, height, pitch;
33     opvp_byte_t data[];
34 }
35 opvp_brushdata_t;

36 typedef struct _opvp_brush {
37     opvp_cspace_t colorSpace;
38     opvp_int_t color[4];
39     opvp_int_t xorg, yorg;
40     opvp_brushdata_t *pbrush;
41 }
42 opvp_brush_t;

43 typedef enum _opvp_bdtype {OPVP_BDTYPE_NORMAL = 0} opvp_bdtype_t;
```

Return Value

`OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

4.5.31.opvpSetFillColor

Name

`opvpSetFillColor` – Sets the fill color and pattern for the `opvpFillPath()` and `opvpStrokeFillPath()` operations of a

1 Graphics State Object.

2 **Synopsis**

```
3      opvp_result_t opvpSetColor(
4                opvp_dc_t printerContext,
5                const opvp_brush_t *brush);
```

6 **Arguments**

7 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

8 brush – Pointer to brush structure data.

9 **Description**

10 This function registers the color or pattern to be used by the Graphics State Object when filling areas as instructed by the `opvpFillPath()` and `opvpStrokeFillPath()` operations.

12 The definition and behavior of the `opvp_brush_t` structure `*brush` is identical to that specified for the `opvpSetStrokeColor()` function.

14 The initial fill color of a Graphics State Object is driver dependent.

15 **Return Value**

16 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

17 **4.5.32.opvpSetBgColor**

18 **Name**

19 `opvpSetBgColor` – Sets the background color for the `opvpStrokePath()`, `opvpFillPath()` and
20 `opvpStrokeFillPath()` operations of a Graphics State Object.

21 **Synopsis**

```
22      opvp_result_t opvpSetBgColor(
23                opvp_dc_t printerContext,
24                const opvp_brush_t *brush);
```

25 **Arguments**

26 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

27 brush – Pointer to brush structure data.

28 **Description**

29 This function sets the background color for the `opvpStrokePath()`, `opvpFillPath()` and
30 `opvpStrokeFillPath()` operations.

31 The caller MUST set a solid brush via the `*brush` parameter. This is achieved by setting the `pbrush` member of the
32 `opvp_brush_t` structure to `NULL`. If the caller fails to do so, the driver MUST return and-an error and set the detailed error
33 code to `OPVP_BADREQUEST`.

34 The driver MAY refer only to the `colorSpace` and `color[4]` members of the `opvp_brush_t` structure, and MUST
35 ignore the `xorg`, `yorg` and `pbrush` members.

36 The initial background color of a Graphics State Object is driver dependent.

37 **Return Value**

38 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

1 4.6.Path Operations

2 This sections defines functions for path operations.

3 A path is used for drawing commands such as “stroke”, “fill” and “stroke and fill”, as well as for defining a clipping area. Any
4 printer context maintains only one path at any one time, and all Graphics State Objects managed by a printer context share the
5 same path. Paths are specified in the caller's coordinate system when passed to path operation functions. The driver transforms
6 the given path to the printer's coordinate system by means of the CTM. The resulting path is registered with the printer context.

7 | Driver support for any of the path operation functions is **OPTIONALRECOMMENDED**.

8 4.6.1.opvpNewPath

9 **Name**

10 opvpNewPath – Starts a new path.

11 **Synopsis**

```
12    opvp_result_t opvpNewPath(  
13         opvp_dc_t printerContext);
```

14 **Arguments**

15 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

16 **Description**

17 This function deletes the printer context's current path and starts a new path. The new path MUST be empty.

18 The initial path of a printer context MUST be empty.

19 **Return Value**

20 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

21 4.6.2.opvpEndPath

22 **Name**

23 opvpEndPath – Declares the end of the current path.

24 **Synopsis**

```
25    opvp_result_t opvpEndPath(  
26         opvp_dc_t printerContext);
```

27 **Arguments**

28 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

29 **Description**

30 This function declares the end of the printer context's current path.

31 The printer context MUST retain the path as the current path.

32 **Return Value**

33 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

34 4.6.3.opvpStrokePath

35 **Name**

36 opvpStrokePath – Draws lines along the current path.

37 **Synopsis**

```
38    opvp_result_t opvpStrokePath(  
39         opvp_dc_t printerContext);
```

1 Arguments

2 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

3 Description

4 This function draws lines along the current path according to the drawing attributes registered with the Graphics State Object.
5 The current path MUST be retained in the printer context after calling this function.

6 Return Value

7 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

8 4.6.4.opvpFillPath**9 Name**

10 `opvpFillPath` – Fills the interior of the current path.

11 Synopsis

```
12    opvp_result_t opvpFillPath(  
13        opvp_dc_t printerContext);
```

14 Arguments

15 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

16 Description

17 This function fills the interior of the current path according to the drawing attributes registered with the Graphics State Object.
18 When the path is not closed, the starting point and end point of the current path are connected by a straight line to determine the
19 interior of the path.
20 The current path MUST be retained in the printer context after calling this function.

21 Return Value

22 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

23 4.6.5.opvpStrokeFillPath**24 Name**

25 `opvpStrokeFillPath` – Draws lines along the current path and fills the interior of the current path.

26 Synopsis

```
27    opvp_result_t opvpStrokeFillPath(  
28        opvp_dc_t printerContext);
```

29 Arguments

30 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

31 Description

32 This function draws lines along the current path, and fills the interior of the current path according to the drawing attributes
33 registered with the Graphics State Object.
34 When the path is not closed, the starting point and end point of the current path are connected by a straight line. This line is
35 used solely to determine the interior of the path and not stroked.
36 The current path MUST be retained in the printer context after calling this function.

37 Return Value

38 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

4.6.6.opvpSetClipPath**2 Name**

3 opvpSetClipPath – Sets the current path as the clipping region.

4 Synopsis

```
5     opvp_result_t opvpSetClipPath(
6         opvp_dc_t printerContext,
7         opvp_clirule_t clipRule);
```

8 Arguments

9 printerContext – Printer context value returned by the opvpOpenPrinter() function.

10 clipRule – Clipping rule enumeration value. OPVP_CLIPRULE_EVENODD (even-odd rule) and
11 OPVP_CLIPRULE_WINDING (non-zero winding number rule) can be set.

12 Description

13 This function sets the current path as a clipping region for the Graphics State Object.

14 When the path is not closed, the starting point and end point of the current path are connected by a straight line and closed.

15 The current path MUST be retained in the printer context after calling this function.

16 The clipping region also MUST be retained until the caller invokes one of: opvpSetClipPath(),
17 opvpResetClipPath(), opvpRestoreGS() or opvpStartPage(). When the caller calls the opvpStartPage()
18 function, the driver MUST reset the clipping region as if the opvpResetClipPath() function had been called.

19 Return Value

20 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

21 4.6.7.opvpResetClipPath**22 Name**

23 opvpResetClipPath – Resets the clipping region.

24 Synopsis

```
25     opvp_result_t opvpResetClipPath(
26         opvp_dc_t printerContext);
```

27 Arguments

28 printerContext – Printer context value returned by the opvpOpenPrinter() function.

29 Description

30 This function resets the clipping region of a Graphics State Object to cover all of the printable area of the media.

31 Return Value

32 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

33 4.6.8.opvpSetCurrentPoint**34 Name**

35 opvpSetCurrentPoint – Sets the current point.

36 Synopsis

```
37     opvp_result_t opvpSetCurrentPoint(
38         opvp_dc_t printerContext,
39         opvp_fix_t x,
40         opvp_fix_t y);
```

41 Arguments

42 printerContext – Printer context value returned by the opvpOpenPrinter() function.

1 x – value of the x coordinate of the new current point.
 2 y – value of the y coordinate of the new current point.

3 **Description**

4 This function set the current point of the printer context to (x, y) .


5 **Return Value**

6 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

7 **4.6.9.opvpLinePath**

8 **Name**

9 opvpLinePath – Adds multiple, connected line segments to the current path.

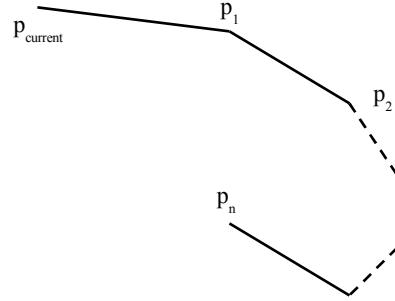

10 **Synopsis**

```
11    opvp_result_t opvpLinePath (
12         opvp_dc_t printerContext,
13         opvp_pathmode_t flag;
14         opvp_int_t npoints,
15         const opvp_point_t *points);
```

16 **Arguments**

17 printerContext – Printer context value returned by the opvpOpenPrinter() function.
 18 flag – Path open/close flag. One of OPVP_PATHCLOSE and OPVP_PATHOPEN can be set.
 19 npoints – Number of elements in points.
 20 points – Pointer to an opvp_point_t structure array.

21 **Description**

22 This function adds the line segments specified by the points array starting at the current point.

23 When the caller passes OPVP_PATHOPEN as flag, the driver MUST append the line segments from the current point and
 24 make the last point of the points array the new current point. When the caller passes OPVP_PATHCLOSE as flag, the
 25 driver MUST append the line segments from the current point and make the first point of the points array the new current
 26 point.

27 **Structures**

```
28    typedef struct _opvp_point {
29         opvp_fix_t x, y;
30    } opvp_point_t;
```

31 **Return Value**

32 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

33 **4.6.10.opvpPolygonPath**

34 **Name**


35 opvpPolygonPath – Adds polygons to the current path.

36 **Synopsis**

```
37    opvp_result_t opvpPolygonPath (
38         opvp_dc_t printerContext,
39         opvp_int_t npolygons,
40         const opvp_int_t *nvertices,
41         const opvp_point_t *points);
```

42 **Arguments**

43 printerContext – Printer context value returned by the opvpOpenPrinter() function.
 44

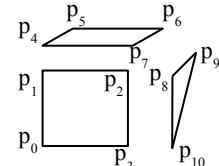

For the above case, each of the arguments is as follows:

npolygons=3
 *nvertices={4, 4, 3}
 *points={p0, p1, ... p10}

1 npolygons – Number of polygons to add.
 2 nvertices – Pointer to an array with the number of points of each polygon.
 3 points – Pointer to an opvp_point_t structure array. The number of points in this array MUST be equal to the sum total
 4 of the values in the nvertices array.

5 **Description**

6 This function adds the polygons specified via its arguments to the current path.
 7 After the polygons have been added, the driver MUST make the last point of the points array the new current point.

8 **Return Value**

9 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

10 **4.6.11.opvpRectanglePath**

11 **Name**

12 opvpRectanglePath – Adds rectangles to the current path.

13 **Synopsis**

```
14     opvp_result_t opvpRectanglePath(  

15         opvp_dc_t printerContext,  

16         opvp_int_t nrectangles,  

17         const opvp_rectangle_t *rectangles);
```

18 **Arguments**

19 printerContext – Printer context value returned by the
 20 opvpOpenPrinter() function.

21 nrectangles – Number of rectangles to add.

22 rectangles – Pointer to an opvp_rectangle structure array.

23 **Description**

24 This function adds rectangles to the current path.

25 After the rectangles have been appended, the driver MUST make the starting
 26 point of the last rectangle appended the new current point.

27 The direction of the paths of each rectangle are specified by the starting and
 28 diagonal points as illustrated in the figure above. The path is appended in
 29 order $(x0, y0)$ - $(x1, y0)$ - $(x1, y1)$ - $(x0, y1)$ - $(x0, y0)$ where the starting point p0 is
 30 $(x0, y0)$ and the diagonal point p1 is $(x1, y1)$.

31 **Structures**

```
32     typedef struct _opvp_rectangle {  

33         opvp_point_t p0;                      /* starting point */  

34         opvp_point_t p1;                      /* diagonal point */  

35     } opvp_rectangle_t;
```

36 **Return Value**

37 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

38 **4.6.12.opvpRoundRectanglePath**

39 **Name**

40 opvpRoundRectanglePath – Adds rounded rectangles to the current path.


41 **Synopsis**

```
42     opvp_result_t opvpRoundRectanglePath(  

43         opvp_dc_t printerContext,  

44         opvp_int_t nrectangles,  

45         const opvp_roundrectangle_t *rectangles);
```

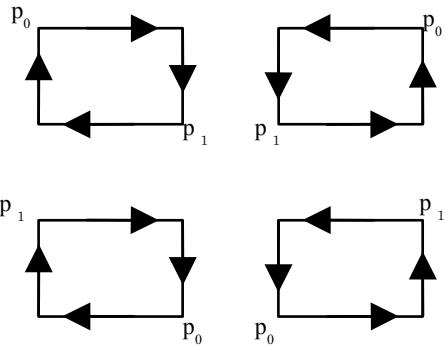

Arguments

1 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.
 2
 3 nrectangles – Number of rounded rectangles to add.
 4 rectangles – Pointer to an `opvp_roundrectangle_t` structure array.

Description

5 This function adds rounded rectangles to the current path.
 6

7 Each corner of a rounded rectangle is connected by an elliptic arc defined by the values of the `xellipse` and `yellipse`
 8 members of the `opvp_roundrectangle_t` structure. After the rounded rectangles have been appended, the driver MUST
 9 make the starting point of the last rounded rectangle appended the new current point.

10 The direction of the paths of each rounded rectangle MUST follow the conventions as specified for the
 11 `opvpRectanglePath()` function.

Structures

```
12 typedef struct _opvp_roundrectangle {
13     opvp_point_t p0;                      /* starting point */
14     opvp_point_t p1;                      /* diagonal point */
15     opvp_fix_t xellipse, yellipse;
16 } opvp_roundrectangle_t;
```

Return Value

18 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.
 19

4.6.13.opvpBezierPath**Name**


21 `opvpBezierPath` – Adds Bézier path segments to the path.
 22

Synopsis

```
23 opvp_result_t opvpBezierPath(
24     opvp_dc_t printerContext,
25     opvp_int_t npoints,
26     const opvp_point_t *points);
```

Arguments

28 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.
 29
 30 `npoints` – Number of elements in `points`. It MUST be multiple of 3.
 31
 32 `points` – Pointer to the array of end and control points of Bézier curves.

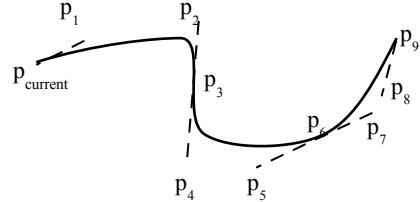

In the above case, each arguments are as following:

`npoints` = 9

`*points` = {`p1`, `p2`, ... `p9`}

Description

33 This function adds multiple Bézier path segments to the current path. Each path segment is specified by four points. The
 34 current point is the start point of the segment and the first point in the `points` array is used to define the start tangent vector.
 35 The second point in the `points` array is used to define the end tangent vector and the third point defines the segment's end
 36 point. The segment's end point becomes the path's new current point. The next path segment is constructed in identical fashion
 37 using the next three points in the `points` array. This process repeats until all points of the `points` array have been used.
 38

39 After the driver has appended the Bézier path segments, the driver MUST set the last point of the `points` array as the current
 40 point.

41 If `npoints` is not a multiple of 3, this function MUST return an error and set the detailed error code to `OPVP_PARAMERROR`.

Return Value

42 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.
 43

4.6.14.opvpArcPath**Name**

45 `opvpArcPath` – Adds arcs, chords, or pies to the current path.
 46

Synopsis

```

1 opvp_result_t opvpArchPath(
2     opvp_dc_t printerContext,
3     opvp_arcmode_t kind,
4     opvp_arcdir_t dir,
5     opvp_fix_t bbx0, opvp_fix_t bby0, opvp_fix_t bbx1, opvp_fix_t bby1,
6     opvp_fix_t x0, opvp_fix_t y0,
7     opvp_fix_t x1, opvp_fix_t y1);
8

```

Arguments

printerContext – Printer context value returned by the `opvpOpenPrinter()` function.


kind – Type of arc path. `OPVP_ARC(Arc)`, `OPVP_CHORD(Chord)`, `OPVP_PIE(Pie)` can be set.

dir – Direction of the path. `OPVP_CLOCKWISE(Clockwise)`, `OPVP_COUNTERCLOCKWISE(Counter-clockwise)` can be set.

`bbx0, bby0, bbx1, bby1` – Circumscribing rectangle.

`x0, y0` – Starting point.

`x1, y1` – End point.

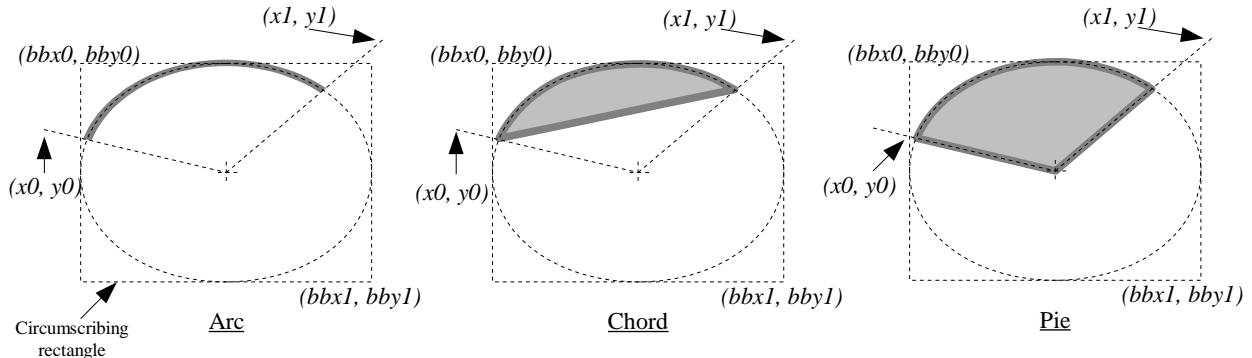**Description**

This function adds an arc, a chord or a pie to the current path. The center point of ellipse is the middle point of the circumscribe rectangle. The direction of the path is specified by `dir`. When `OPVP_ARC` is set into `kind` and the same point is set into both start and end points, driver MUST append ellipse into the path. If the circumscribe rectangle is a square, driver MUST adds circle to the path.

After driver adds paths, in case of arc, driver MUST set the end point of the arc as the current point. In case of chord or pie, driver MUST set the left-top point of the circumscribe rectangle as the current point.

Return Value

`OPVP_OK` or `-1` in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

35

36

37

1 4.7. Bitmap Image Operations

2 This section defines functions for bitmap operations.

3 A bitmap is a pixel oriented image format for rectangular images. A bitmap is drawn using the drawing attributes registered
4 with a Graphics State Object.

5 The typical bitmap drawing sequence is as follows:

- 6 ● opvpStartDrawImage () – Declares the start of a bitmap drawing sequence and sets up the Graphics State
7 Object.
- 8 ● opvpTransferDrawImage () – Transfers the actual image data. The caller typically invokes this function
9 one or more times.
- 10 ● opvpEndDrawImage () – Declares the end of a bitmap drawing sequence.

11 If the caller calls any functions other than the opvpTransferDrawImage () or opvpAbortJob () function between the
12 opvpStartDrawImage () and opvpEndDrawImage () functions, the driver MUST return an error and set the detailed
13 error code to OPVP_BADREQUEST.

14 The opvpDrawImage () convenience function performs the opvpStartDrawImage (), opvpTransferDrawImage ()
15 and opvpEndDrawImage () function calls as a single function call.

16 | All bitmap operation functions are **OPTIONALRECOMMENDED**.

17 4.7.1. opvpDrawImage

18 **Name**

19 opvpDrawImage – Draws a bitmap image

20 **Synopsis**

```
21 opvp_result_t opvpDrawImage(
22     opvp_dc_t printerContext,
23     opvp_int_t sourceWidth,
24     opvp_int_t sourceHeight,
25     opvp_int_t sourcePitch,
26     opvp_imageformat_t imageFormat,
27
28     opvp_int_t destinationWidth,
29     opvp_int_t destinationHeight,
30     const void *imageData);
```

31 **Arguments**

32 printerContext – Printer context value returned by the opvpOpenPrinter () function.

33 sourceWidth – Width (in pixels) of the source image.

34 sourceHeight – Height (in pixels) of the source image.

35 sourcePitch – Length (in bytes) of each line of image data.

36 imageFormat – Image format of the source image.

37 destinationWidth – Destination drawing width (in caller coordinate system units).

38 destinationHeight – Destination drawing height (in caller coordinate system units).

39 imageData – Pointer to the source image data.

40 **Description**

41 This function is a convenience function to transfer a bitmap image in a single function call. It is functionally equivalent to the
42 following:

```
43 opvpStartDrawImage (printerContext, sourceWidth, sourceHeight, sourcePitch,
44     imageFormat, destinationWidth, destinationHeight);
45 opvpTransferDrawImage(printerContext, sourceHeight * sourcePitch, imageData);
46 opvpEndDrawImage(printerContext);
47 See the respective functions for more details.
```

48

1 **Return Value**

2 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.


3 **4.7.2.opvpStartDrawImage**

4 **Name**

5 opvpStartDrawImage – Declares the start of a bitmap drawing sequence.

6 **Synopsis**

```
7    opvp_result_t opvpStartDrawImage(
8        opvp_dc_t printerContext,
9        opvp_int_t sourceWidth,
10      opvp_int_t sourceHeight,
11      opvp_int_t sourcePitch,
12      opvp_imageformat_t imageFormat,
13  
14     opvp_int_t destinationWidth,
15     opvp_int_t destinationHeight
16 );
```

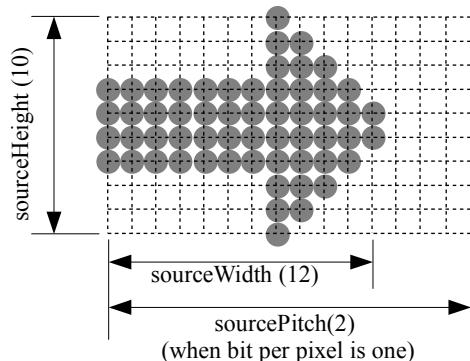

17 **Arguments**

18 printerContext – Printer context value returned by the
19 opvpOpenPrinter() function.

20 sourceWidth – Width (in pixels) of the source image.

21 sourceHeight – Height (in pixels) of the source image.

22 sourcePitch – Length (in bytes) of each line of image data.

23 imageFormat – Image format of the source image.

24 destinationWidth – Destination drawing width (in caller coordinate system units).

25 destinationHeight – Destination drawing height (in caller coordinate system units).

26 **Description**

27 This function declares the start of a bitmap image drawing operation. The destination image drawing area is specified by means
28 of the current point kept in the printer context and destinationWidth and destinationHeight. The upper-left corner
29 of the image MUST be drawn on the current point and the bottom-right corner of the image MUST be drawn at $(x_{current} +$
30 $destinationWidth - 1, y_{current} + destinationHeight - 1)$ where $x_{current}$ is the current point x coordinate value and $y_{current}$ is the current
31 point y coordinate value.

32 If the width or height of source and destination are not equal, the image are expected to be drawn scaled. If the driver does not
33 support image scaling, this function MAY return an error and set the detailed error code to OPVP_NOTSUPPORTED.

34 If the current point coordinate value is not an integer, the reference point for drawing the image MAY be rounded to an integer.

35 After the caller calls this function, the caller MUST call the opvpTransferDrawImage() function once or more to transfer
36 the actual image data to the driver, or call the opvpAbortJob() to abort the printing job. If the caller calls any other function
37 between the opvpStartDrawImage() and opvpEndDrawImage() function, the driver MUST return an error and set the
38 detailed error code to OPVP_BADREQUEST.

39 The following image formats are defined in this document:

Image Format	Description
OPVP_IFORMAT_RAW	Raw image data. The image data format corresponds to that for the current color space. The caller MUST call the opvpSetColorSpace() function before calling this function. The current color space value MUST be one of the color spaces supported by the driver.
OPVP_IFORMAT_MASK	Mask. The image data format corresponds to that of the OPVP_CSPACE_BW color space. When the painting mode is OPVP_PAINTMODE_OPAQUE (opaque mode) a “1” bit in the image data MUST be drawn using the current fill color, and a “0” bit MUST be drawn using the color set by the opvpSetBgColor() function. When the painting mode is OPVP_PAINTMODE_TRANSPARENT (transparent mode), a “1” bit in the image data MUST be drawn using the current fill color, and a “0” bit MUST NOT be drawn
OPVP_IFORMAT_JPEG	JPEG image format. Reserved for future extension.

OPVP_IFORMAT_PNG	PNG image format. Reserved for future extension.
OPVP_IFORMAT_RLE	RLE format. Reserved for future extension.

- 1
2 The image data format for each color space is defined in the section “Image Data Format”.
3 A driver MUST support both OPVP_IFORMAT_RAW and OPVP_IFORMAT_MASK.
4
5 After drawing an image, the driver MUST NOT change the current point.

6 **Return Value**

7 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

8 **4.7.3.opvpTransferDrawImage**

9 **Name**

10 opvpTransferDrawImage – Transfers a chunk of bitmap image data

11 **Synopsis**

```
12     opvp_result_t opvpTransferDrawImage(
13         opvp_dc_t printerContext,
14         opvp_int_t count,
15         const void *imageData);
```

16 **Arguments**

17 printerContext – Printer context value returned by the opvpOpenPrinter() function.

18 count – Number of image bytes to transfer.

19 imageData – Pointer to the source image data.

20 **Description**

21 This function transfers a chunk of bitmap image data. A caller MUST call the opvpStartDrawImage() function before
22 calling this function.

23 When this function returns an error, the caller MUST call the opvpEndDrawImage() function before calling any other
24 function.

25 **Return Value**

26 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

27 **4.7.4.opvpEndDrawImage**

28 **Name**

29 opvpEndDrawImage – Declares the end of a bitmap drawing sequence

30 **Synopsis**

```
31     opvp_result_t opvpEndDrawImage(
32         opvp_dc_t printerContext);
```

33 **Arguments**

34 printerContext – Printer context value returned by the opvpOpenPrinter() function.

35 **Description**

36 This function declares the end of a bitmap drawing sequence.

37 If a caller does not transfer a sufficient image data by calling the opvpTransferDrawImage() function, this function
38 MAY return an error. In this case, the driver MUST set the detailed error code to OPVP_BADREQUEST.

39 **Return Value**

40 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

1 4.8.Scan Line Operations

2 This section defines functions for scan line operations.

3 Scan line operations provide support for drawing of horizontal lines defined by one or more pairs of begin and end points. Scan
4 lines are drawn with the drawing attributes registered with a Graphics State Object. Specifically, scan lines are drawn using the
5 current fill color.

6 Driver support for any of the scan line operations is OPTIONAL.

7 If the caller calls any API entry other than `opvpScanline()` or `opvpAbortJob()` between the
8 `opvpStartScanline()` and `opvpEndScanline()` functions, the driver MUST return an error and set the detailed error
9 code to `OPVP_BADREQUEST`.

10

11

12 4.8.1.opvpStartScanline

13 **Name**

14 `opvpStartScanline` – Declares the start of a scan line draw operation.

15 **Synopsis**

```
16     opvp_result_t opvpStartScanline(
17         opvp_dc_t printerContext,
18         opvp_int_t yposition);
```

19 **Arguments**

20 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

21 `yposition` – Vertical position to draw the scan line.

22 **Description**

23 This function declares the start of a scan line draw operation. Scan lines are drawn using three functions. The
24 `opvpStartScanline()` function declares the start of a scan line draw operation, the `opvpScanline()` function
25 transfers the actual scan line data, and the `opvpEndScanline()` function terminates the scan line draw operation. The
26 driver MUST NOT change the current point after these operations.

27 **Return Value**

28 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

29 4.8.2.opvpScanline

30 **Name**

31 `opvpScanline` – Draws the scan lines.

● scan line begin/end pixels
○ intermediate pixels

32 **Synopsis**


```
33     opvp_result_t opvpScanline(
34         opvp_dc_t printerContext,
35         opvp_int_t nscanpairs,
36         const opvp_int_t *scancpairs);
```

37 **Arguments**

38 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

39 `nscanpairs` – Number of begin and end point pairs

40 `scancpairs` – Pointer to an array of begin and end point pairs

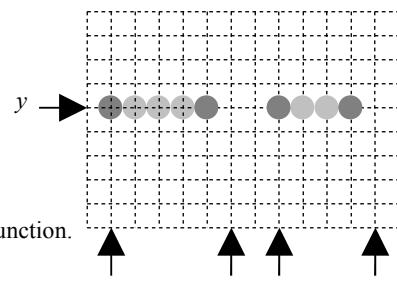

*`scancpairs` = `{ {x0, x1}, {x2, x3} }`

41 **Description**

42 This function draws the scan lines. After the caller calls this function, the driver MUST increment the y coordinate value of the
43 current scan line by 1. The y coordinate of the current scan line is independent from y coordinate of the current point. The
44 driver MUST maintain the current scan line's y coordinate in the printer context between calls to the

1 opvpStartScanLine() and opvpEndScanLine() functions. The driver MUST NOT change the current point when
2 this function is called.

3

4 **Return Value**

5 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

6 **4.8.3.opvpEndScanline**

7 **Name**

8 opvpEndScanline – Terminates a scan line draw operation.

9 **Synopsis**

10 opvp_result_t opvpEndScanline(
11 opvp_dc_t printerContext);

12 **Arguments**

13 printerContext – Printer context value returned by the opvpOpenPrinter() function.

14 **Description**

15 This function terminates a scan line draw operation.

16 **Return Value**

17 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

1 4.9.Raster Image Operations

2 This section defines functions for raster image operations.

3 Raster image operations provide the support for raster image drawing. Driver support for any of the raster image operations is
 4 **OPTIONALRECOMMENDED**. However, in case the driver supports neither bitmap image nor path operations, raster image
 5 operations MUST be supported.

6 Compressed raster data is not supported by this specification. However, a driver MAY perform raster image data compression
 7 if desirable.

8 If the caller calls any API entry other than `opvpTransferRasterData()`, `opvpSkipRaster()` or
 9 `opvpAbortJob()` between the `opvpStartRaster()` and `opvpEndRaster()` functions, the driver MUST return an
 10 error and set the detailed error code to `OPVP_BADREQUEST`.

11 4.9.1.opvpStartRaster

12 **Name**

13 `opvpStartRaster` – Declares the start of a raster image drawing operation.

14 **Synopsis**

```
15    opvp_result_t opvpStartRaster(  

16        opvp_dc_t printerContext,  

17        opvp_int_t rasterWidth);
```

18 **Arguments**

19 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

20 `rasterWidth` – Width (in pixels) of the raster image (MUST NOT include padding data)

21 **Description**

22 This function declares the start of a raster data drawing operation.

23 The driver MUST draw the raster image starting at the current point.

24 The driver MUST use the color space registered with the current Graphics State Object when interpreting the raster image data.

25 Raster data color spaces and their corresponding formats are defined in the section “Image Data Format”.

26 **Return Value**

27 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

28 4.9.2.opvpTransferRasterData

29 **Name**

30 `opvpTransferRasterData` – Transfers raster image data.

31 **Synopsis**

```
32    opvp_result_t opvpTransferRasterData(  

33        opvp_dc_t printerContext,  

34        opvp_int_t count,  

35        const opvp_byte_t *data);
```

36 **Arguments**

37 `printerContext` – Printer context value returned by the `opvpOpenPrinter()` function.

38 `count` – Number of pixel data elements.

39 `data` – Pointer to pixel data array.

40 **Description**

41 This function transfers pixel data elements of a single row of raster data. The driver MUST only transfer the lesser of `count`
 42 and `rasterWidth` pixels. If `count` is less than `rasterWidth`, the driver MUST NOT transfer “filler” pixels. In case
 43 `count` exceeds `rasterWidth`, the driver MUST ignore the additional pixels.

1 After drawing the raster data, the driver MUST increment the value of the *y* coordinate of the current point by 1.

2 **Return Value**

3 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in *opvpErrorNo*.

4 **4.9.3.opvpSkipRaster**

5 **Name**

6 *opvpSkipRaster* – Skips lines during raster image drawing.

7 **Synopsis**

```
8     opvp_result_t opvpSkipRaster(  
9         opvp_dc_t printerContext,  
10        opvp_int_t count);
```

11 **Arguments**

12 *printerContext* – Printer context value returned by the *opvpOpenPrinter()* function.

13 *count* – Number of lines to be skipped.

14 **Description**

15 This function skips *count* lines in the vertical direction during raster image drawing. After skipping these lines, the driver
16 MUST increment the value of the *y* coordinate of the current point by *count*.

17 **Return Value**

18 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in *opvpErrorNo*.

19 **4.9.4.opvpEndRaster**

20 **Name**

21 *opvpEndRaster* – Terminates a raster image draw operation.

22 **Synopsis**

```
23     opvp_result_t opvpEndRaster(  
24         opvp_dc_t printerContext);
```

25 **Arguments**

26 *printerContext* – Printer context value returned by the *opvpOpenPrinter()* function.

27 **Description**

28 This function terminates a raster image draw operation.

29 **Return Value**

30 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in *opvpErrorNo*.

1 4.10.Stream Data Operations

2 This section defines functions for stream data operations.

3 Stream data operations provide support for applications that create printer native PDL(Printer Description Language) data and
4 sends this data to the device directly. Driver support for any of the stream data operations is OPTIONAL

5 If the caller calls any API entries other than opvpTransferStreamData() or opvpAbortJob() between the
6 opvpStartStream() and opvpEndStream() functions, the driver MUST return an error and set the detailed error code
7 to OPVP_BADREQUEST.

8

9 4.10.1.opvpStartStream

10 **Name**

11 opvpStartStream – Declares the start of a stream data transfer.

12 **Synopsis**

```
13    opvp_result_t opvpStartStream(  
14         opvp_dc_t printerContext);
```

15 **Arguments**

16 printerContext – Printer context value returned by the opvpOpenPrinter() function.

17 **Description**

18 This function declares the start of a stream data transfer. Stream data is data that is sent to the printer device directly without
19 any processing by the driver.

20 **Return Value**

21 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

22 4.10.2.opvpTransferStreamData

23 **Name**

24 opvpTransferStreamData – Sends stream data.

25 **Synopsis**

```
26    opvp_result_t opvpTransferStreamData(  
27         opvp_dc_t printerContext,  
28         opvp_int_t count,  
29         const void *data);
```

30 **Arguments**

31 printerContext – Printer context value returned by the opvpOpenPrinter() function.

32 count – Number of data bytes to transfer.

33 data – Pointer to the stream data.

34 **Description**

35 This function sends stream data directly to the printer device.

36 **Return Value**

37 OPVP_OK or -1 in case of error. In the latter case, the driver MUST store the detailed error code in opvpErrorNo.

38 4.10.3.opvpEndStream

39 **Name**

40 opvpEndStream – Declares the end of a stream data transfer.

1 **Synopsis**

2 opvp_result_t opvpEndStream(
3 opvp_dc_t printerContext);

4 **Arguments**

5 printerContext – Printer context value returned by the `opvpOpenPrinter()` function.

6 **Description**

7 This function terminates a stream data transfer.

8 **Return Value**

9 `OPVP_OK` or -1 in case of error. In the latter case, the driver MUST store the detailed error code in `opvpErrorNo`.

1 5.Macros, Types, Enumerations and Structures

1 5.1.Return Values

```
2 #define OPVP_OK           0      /* -1 for errors */
```

1 5.2.Error Codes

```
2 #define OPVP_FATALERROR    -1      /* error: cannot be recovered */
3 #define OPVP_BADREQUEST     -2      /* error: called where it should not be called */
4 #define OPVP_BADCONTEXT      -3      /* error: invalid printer context */
5 #define OPVP_NOTSUPPORTED    -4      /* error: combination of parameters are set */
6                                /* that cannot be handled by driver or printer */
7 #define OPVP_JOBCANCELED     -5      /* error: job has been canceled by some cause */
8 #define OPVP_PARAMERROR      -6      /* error: invalid parameter */
9 #define OPVP_VERSIONERROR    -7      /* error: invalid API version */
```

1 5.3.Basic Types

```
2 typedef int opvp_dc_t;                  /* driver/device context */
3 typedef int opvp_result_t;              /* return value */
4 typedef unsigned char opvp_byte_t;      /* BYTE */
5 typedef unsigned char opvp_char_t;       /* character (string) */
6 typedef int opvp_int_t;                 /* integer */
7 typedef int opvp_fix_t;                 /* fixed integer */
8 typedef float opvp_float_t;             /* float */
9 typedef unsigned int opvp_flag_t;        /* flags */

10 typedef struct _opvp_point {
11     opvp_fix_t x, y;
12 } opvp_point_t;

14 typedef struct _opvp_rectangle {
15     opvp_point_t p0;                   /* start point */
16     opvp_point_t p1;                   /* diagonal point */
17 } opvp_rectangle_t;

19 typedef struct _opvp_roundrectangle {
20     opvp_point_t p0;                 /* start point */
21     opvp_point_t p1;                 /* diagonal point */
22     opvp_fix_t xellipse, yellipse;
23 } opvp_roundrectangle_t;
```

1 5.4.Image Formats

```
2 typedef enum _opvp_imageformat {
3     OPVP_FORMAT_RAW                = 0,
4     OPVP_FORMAT_MASK                = 1,
5     OPVP_FORMAT_RLE                = 2,
6     OPVP_FORMAT_JPEG                = 3,
7     OPVP_FORMAT_PNG                = 4
8 } opvp_imageformat_t;
```

1 5.5.Color Presentation

```
2 typedef enum _opvp_cspace {
3     OPVP_CSPACE_BW                = 0,
4     OPVP_CSPACE_DEVICEGRAY         = 1,
5     OPVP_CSPACE_DEVICECMY          = 2,
6     OPVP_CSPACE_DEVICECMYK         = 3,
7     OPVP_CSPACE_DEVICERGB          = 4,
```

```

1     OPVP_CSPACE_DEVICEKRGB      = 5,
2     OPVP_CSPACE_STANDARDRGB     = 6,
3     OPVP_CSPACE_STANDARDRGB64   = 7
4 } opvp_cspace_t;

```

1 5.6.Fill, Paint, Clip

```

2     typedef enum _opvp_fillmode {
3         OPVP_FILLMODE_EVENODD        = 0,
4         OPVP_FILLMODE_WINDING        = 1
5     } opvp_fillmode_t;
6
7     typedef enum _opvp_paintmode {
8         OPVP_PAINTMODE_OPAQUE        = 0,
9         OPVP_PAINTMODE_TRANSPARENT   = 1
10    } opvp_paintmode_t;
11
12    typedef enum _opvp_cliprule {
13        OPVP_CLIPRULE_EVENODD        = 0,
14        OPVP_CLIPRULE_WINDING        = 1
15    } opvp_cliprule_t;

```

1 5.7.Line

```

2     typedef enum _opvp_linestyle {
3         OPVP_LINESTYLE_SOLID         = 0,
4         OPVP_LINESTYLE_DASH          = 1
5     } opvp_linestyle_t;
6
7     typedef enum _opvp_linecap {
8         OPVP_LINECAP_BUTT            = 0,
9         OPVP_LINECAP_ROUND           = 1,
10        OPVP_LINECAP_SQUARE          = 2
11    } opvp_linecap_t;
12
13    typedef enum _opvp_linejoin {
14        OPVP_LINEJOIN_MITER          = 0,
15        OPVP_LINEJOIN_ROUND           = 1,
16        OPVP_LINEJOIN_BEVEL           = 2
17    } opvp_linejoin_t;

```

1 5.8.Brush

```

2     typedef struct _opvp_brushdata {
3         opvp_bdtype_t type;
4         opvp_int_t width, height, pitch;
5         opvp_byte_t data[];
6
7     } opvp_brushdata_t;
8
9     typedef struct _opvp_brush {
10        opvp_cspace_t colorSpace;
11        opvp_int_t color[4];
12        opvp_int_t xorg, yorg; /* brush origin ,ignored for opvpSetBgColor */
13        opvp_brushdata_t *pbrush; /* pointer to brush data */
14    } opvp_brush_t;
15
16     typedef enum _opvp_bdtype {OPVP_BTDTYPE_NORMAL = 0} opvp_bdtype_t;

```

1 5.9.Miscellaneous Flags

```

2     typedef enum _opvp_arcmode {
3         OPVP_ARC                     = 0,
4         OPVP_CHORD                   = 1,
5         OPVP_PIE                     = 2

```

```

1 } opvp_arcmode_t;
2
3 typedef enum _opvp_arcdir {
4     OPVP_CLOCKWISE          = 0,
5     OPVP_COUNTERCLOCKWISE    = 1
6 } opvp_arcdir_t;
7
8 typedef enum _opvp_pathmode {
9     OPVP_PATHCLOSE          = 0,
10    OPVP_PATHOPEN           = 1
11 } opvp_pathmode_t;

```

1 5.10.CTM

```

2 typedef struct _opvp_ctm {
3     opvp_float_t a, b, c, d, e, f;
4 } opvp_ctm_t;

```

1 5.11.Device Information and Capabilities

```

2 typedef enum _opvp_queryinfoflags {
3     OPVP_QF_DEVICERESOLUTION = 0x00000001,
4     OPVP_QF_MEDIASIZE        = 0x00000002,
5     OPVP_QF_PAGEROTATION     = 0x00000004,
6     OPVP_QF_MEDIANUP         = 0x00000008,
7     OPVP_QF_MEDIADUPLEX      = 0x00000010,
8     OPVP_QF_MEDIASOURCE       = 0x00000020,
9     OPVP_QF_MEDIADESTINATION = 0x00000040,
10    OPVP_QF_MEDIATYPE         = 0x00000080,
11
12    OPVP_QF_MEDIACOPY         = 0x00000100, /* Maximum copy number supported */
13    OPVP_QF_PRINTREGION       = 0x00010000 /* only for opvpQueryDeviceInfo use */
14 } opvp_queryinfoflags_t;

```

1 5.12.API Procedures Structure

```

2 typedef     struct _opvp_api_procs {
3     opvp_dc_t    (*opvpOpenPrinter)(opvp_int_t,const opvp_char_t*, const
4     opvp_int_t [2],struct _opvp_api_procs**);
5     opvp_result_t (*opvpClosePrinter)(opvp_dc_t);
6     opvp_result_t (*opvpStartJob)(opvp_dc_t,const opvp_char_t*);
7     opvp_result_t (*opvpEndJob)(opvp_dc_t);
8     opvp_result_t (*opvpAbortJob)(opvp_dc_t);
9     opvp_result_t (*opvpStartDoc)(opvp_dc_t,const opvp_char_t*);
10    opvp_result_t (*opvpEndDoc)(opvp_dc_t);
11    opvp_result_t (*opvpStartPage)(opvp_dc_t,const opvp_char_t*);
12    opvp_result_t (*opvpEndPage)(opvp_dc_t);
13    opvp_result_t (*opvpQueryDeviceCapability)
14    (opvp_dc_t,opvp_flag_t,opvp_int_t*,opvp_char_t*);
15    opvp_result_t (*opvpQueryDeviceInfo)
16    (opvp_dc_t,opvp_flag_t,opvp_int_t*,opvp_char_t*);
17    opvp_result_t (*opvpResetCTM)(opvp_dc_t);
18    opvp_result_t (*opvpSetCTM)(opvp_dc_t,const opvp_ctm_t* );
19    opvp_result_t (*opvpGetCTM)(opvp_dc_t,opvp_ctm_t* );
20    opvp_result_t (*opvpInitGS)(opvp_dc_t);
21    opvp_result_t (*opvpSaveGS)(opvp_dc_t);
22    opvp_result_t (*opvpRestoreGS)(opvp_dc_t);
23    opvp_result_t (*opvpQueryColorSpace)(opvp_dc_t,opvp_int_t*,opvp_cspace_t* );
24    opvp_result_t (*opvpSetColorSpace)(opvp_dc_t,opvp_cspace_t);
25    opvp_result_t (*opvpGetColorSpace)(opvp_dc_t,opvp_cspace_t* );
26    opvp_result_t (*opvpSetFillMode)(opvp_dc_t,opvp_fillmode_t* );
27    opvp_result_t (*opvpGetFillMode)(opvp_dc_t,opvp_fillmode_t* );
28    opvp_result_t (*opvpSetAlphaConstant)(opvp_dc_t,opvp_float_t);
29    opvp_result_t (*opvpGetAlphaConstant)(opvp_dc_t,opvp_float_t* );
30    opvp_result_t (*opvpSetLineWidth)(opvp_dc_t,opvp_fix_t);
31    opvp_result_t (*opvpGetLineWidth)(opvp_dc_t,opvp_fix_t);

```

```

1     opvp_result_t (*opvpSetLineDash) (opvp_dc_t,opvp_int_t,const opvp_fix_t* );
2     opvp_result_t (*opvpGetLineDash) (opvp_dc_t,opvp_int_t*,opvp_fix_t* );
3     opvp_result_t (*opvpSetLineDashOffset) (opvp_dc_t,opvp_fix_t);
4     opvp_result_t (*opvpGetLineDashOffset) (opvp_dc_t,opvp_fix_t* );
5     opvp_result_t (*opvpSetLineStyle) (opvp_dc_t,opvp_linestyle_t);
6     opvp_result_t (*opvpGetLineStyle) (opvp_dc_t,opvp_linestyle_t* );
7     opvp_result_t (*opvpSetLineCap) (opvp_dc_t,opvp_linecap_t);
8     opvp_result_t (*opvpGetLineCap) (opvp_dc_t,opvp_linecap_t* );
9     opvp_result_t (*opvpSetLineJoin) (opvp_dc_t,opvp_linejoin_t);
10    opvp_result_t (*opvpGetLineJoin) (opvp_dc_t,opvp_linejoin_t* );
11    opvp_result_t (*opvpSetMiterLimit) (opvp_dc_t,opvp_fix_t);
12    opvp_result_t (*opvpGetMiterLimit) (opvp_dc_t,opvp_fix_t* );
13    opvp_result_t (*opvpSetPaintMode) (opvp_dc_t,opvp_paintmode_t);
14    opvp_result_t (*opvpGetPaintMode) (opvp_dc_t,opvp_paintmode_t* );
15    opvp_result_t (*opvpSetStrokeColor) (opvp_dc_t,const opvp_brush_t* );
16    opvp_result_t (*opvpSetFillColor) (opvp_dc_t,const opvp_brush_t* );
17    opvp_result_t (*opvpSetBgColor) (opvp_dc_t,const opvp_brush_t* );
18    opvp_result_t (*opvpNewPath) (opvp_dc_t);
19    opvp_result_t (*opvpEndPath) (opvp_dc_t);
20    opvp_result_t (*opvpStrokePath) (opvp_dc_t);
21    opvp_result_t (*opvpFillPath) (opvp_dc_t);
22    opvp_result_t (*opvpStrokeFillPath) (opvp_dc_t);
23    opvp_result_t (*opvpSetClipPath) (opvp_dc_t,opvp_cliprule_t);
24    opvp_result_t (*opvpResetClipPath) (opvp_dc_t);
25    opvp_result_t (*opvpSetCurrentPoint) (opvp_dc_t,opvp_fix_t,opvp_fix_t);
26    opvp_result_t (*opvpLinePath) (opvp_dc_t,opvp_pathmode_t,opvp_int_t,const
27    opvp_point_t* );
28    opvp_result_t (*opvpPolygonPath) (opvp_dc_t,opvp_int_t,const opvp_int_t*,const
29    opvp_point_t* );
30    opvp_result_t (*opvpRectanglePath) (opvp_dc_t,opvp_int_t,const
31    opvp_rectangle_t* );
32    opvp_result_t (*opvpRoundRectanglePath) (opvp_dc_t,opvp_int_t,const
33    opvp_roundrectangle_t* );
34    opvp_result_t (*opvpBezierPath) (opvp_dc_t,opvp_int_t,const opvp_point_t* );
35    opvp_result_t (*opvpArcPath)
36 (opvp_dc_t,opvp_arcmode_t,opvp_arcdir_t,opvp_fix_t,opvp_fix_t,opvp_fix_t,op
37 vp_fix_t,opvp_fix_t,opvp_fix_t,opvp_fix_t);
38    opvp_result_t (*opvpDrawImage)
39 (opvp_dc_t,opvp_int_t,opvp_int_t,opvp_int_t,opvp_imageformat_t,opvp_int_t,opvp_int_t,c
40 onst void* );
41    opvp_result_t (*opvpStartDrawImage)
42 (opvp_dc_t,opvp_int_t,opvp_int_t,opvp_int_t,opvp_imageformat_t,opvp_int_t,opvp_int_t);
43    opvp_result_t (*opvpTransferDrawImage) (opvp_dc_t,opvp_int_t,const void* );
44    opvp_result_t (*opvpEndDrawImage) (opvp_dc_t);
45    opvp_result_t (*opvpStartScanline) (opvp_dc_t,opvp_int_t);
46    opvp_result_t (*opvpScanline) (opvp_dc_t,opvp_int_t,const opvp_int_t* );
47    opvp_result_t (*opvpEndScanline) (opvp_dc_t);
48    opvp_result_t (*opvpStartRaster) (opvp_dc_t,opvp_int_t);
49    opvp_result_t (*opvpTransferRasterData) (opvp_dc_t,opvp_int_t,const
50    opvp_byte_t* );
51    opvp_result_t (*opvpSkipRaster) (opvp_dc_t,opvp_int_t);
52    opvp_result_t (*opvpEndRaster) (opvp_dc_t);
53    opvp_result_t (*opvpStartStream) (opvp_dc_t);
54    opvp_result_t (*opvpTransferStreamData) (opvp_dc_t,opvp_int_t,const void* );
55    opvp_result_t (*opvpEndStream) (opvp_dc_t);
56 } opvp_api_procs_t;

```

2 |

6. Conformance Requirement

3 |

Confirming implementations of this OPVP API specification in libraries and drivers are shown in the table below:

API, Macros, Types, Enumerations and Structures	Requirement
All of the Printer Context operations defined in section 4.1	MUST
All of the Job, Document, and Page operations defined in section 4.2	MUST
All of the Query operations defined in section 4.3	RECOMMENDED
All of the Attributes and "updf" scheme defined in section 4.4	MUST
Any of the Graphics State Object operations defined in section 4.5	OPTIONAL
All of the Path operations defined in section 4.6	RECOMMENDED
All of the Bitmap Image operations defined in section 4.7	RECOMMENDED
Any of the Scan Line operations defined in section 4.8	OPTIONAL
If either Path or Bitmap Image operations are supported, all of the Raster Image operations defined in section 4.9	RECOMMENDED
If neither Path nor Bitmap Image operations are supported, all of the Raster Image operations defined in section 4.9	MUST
Any of the Stream Data operations defined in section 4.10	OPTIONAL
All of the Macros, Types, Enumerations, and Structures defined in section 5	MUST

1 | **7. Security Considerations**

2 | There are no applicable security considerations for this OPVP API. Note that Remote Procedure Call implementations of this
3 | OPVP API will need to address the usual network security considerations.

4 |
5 |

8. Authors and Contributors

8.1. Editors

2 Osamu Mihara – Fuji Xerox Co., Ltd.

8.2. Authors

2 Osamu Mihara – Fuji Xerox Co., Ltd.
3 Yasumasa Toratani – Canon Inc.

8.3. Contributors

2 (Alphabetical order) Hidekazu Hagiwara (MintWave), Masaki Iwata (AXE), Hidenori Kanjo (BBR), Shimpei Kitayama
3 (EPSON AVASYS), Kenichi Maeda (E&D), Akeo Maruyama (Ricoh), Olaf Meeuwissen (EPSON AVASYS), Hisao Nakamura
4 (E&D), Naruhiko Ogasawara (Ricoh), Koji Otani (BBR), Kenji Wakabayashi (MintWave), Toshihiro Yamagishi (Turbolinux),
5 Akira Yoshiyama (NEC)

9. History

1
2 Version 0.1 (Japanese) Mihara/Toratani
3 Version 0.2 (Japanese) Mihara
4 openprinting-0.1.1 implementation by opfc
5 Version 0.2-en 2004-3-14 Mihara/Toratani/Kitayama/Yamagishi/Kanjo
6 Translation to English
7 Feedback from opfc implementation
8 Version 1.0 RC1 2005-7-20 Mihara
9 Change copyright notice from FDL to MIT style copyright
10 Delete temporary font operations.
11 Version 1.0 RC2 2006-6-9/2006-6-17/2006-6-20/2006-6-26/2006-6-29
12 Add API version number to OpenPrinter() parameter
13 Add pitch and delete count to/from DrawImage()/StartDrawImage()
14 Add a figure for SetMiterLimit.
15 Change function names/constants/enumerations/structures names to add FSG prefixes.
16 Change copyright year and dates
17 Delete "Printer Driver Database"
18 Delete *cmap* from CSPASE chart.
19 Fix parameter colorSpace (wrong) to colorDepth (correct) for DrawImage()/StartDrawImage
20 Change description for fsgpdStartJob/fsgpdEndJob/fsgpdAbortJob
21 Add type FSGPD_CHAR for character type
22 Version 1.0 RC2 2006-10-20
23 Add FSGPD_CSPACE_DEVICEKRGB
24 Remove "current implementation" descriptions from Color Scheme and Color Space descriptions.
25 Remove "described later" descriptions
26 Make support of updf for scheme "MUST."
27 Version 1.0 RC2 2006-12-05
28 Format: Add line numbers and chapter numbers.
29 Format: Replace Microsoft Expressions object to OO Expressions
30 Version 1.0 RC3 2007-5-19 Toratani
31 Append "opvp" or "OPVP" to function names, enumerations, symbols according to the naming rules.
32 Update parameters of opvpOpenPrinter() function and the bitmap image functions.
33 Rearrange the document sections, chapters and text format.
34 Merge the RC2 2006-6-9 – 2006-12-05 updates made by Mihara
35
36 Version 1.0 RC5 2007-9-19 Toratani – Overall parts are reviewed and revised.
37 Brushed-up massively English expressions and corrected typos.
38 Re-write "Introduction."
39 Added sections "3.5" and "3.6"
40 Added "const" type keywords to function parameters which should not be over-written.
41 Added "num" parameter to opvpSetLineDash().
42 Added "pnum" parameter to opvpGetLineDash().
43 Deleted "Graphic Operation Fallback" section.
44
45 Version 1.0 RC6 2009-12-24 Mihara
46 Changed years for Copyright from "2007" to "2004-2009."
47 |
48 | [Version 1.0 September 27, 2010 Toratani](#)
49 | [Reviced several points based on the US groups comments.](#)